

DESO 5DS

Singlebeam Echosounder

OPERATOR'S MANUAL



Part Number 1015871-DK

Version 6

May 2023

Use and Disclosure of Data

EU Uncontrolled Technology:

Information contained herein is uncontrolled under the EU-regulation no. 821 of 20 May 2021.
However, export, reexport or diversion contrary to law is prohibited.

REVISION HISTORY

Version	Date	Remarks
6	9 May 2023	0.3: Glossary updated. 1.2: Updated. 2: Safety Precautions chapter moved before Product Description chapter. 3.1: Transducer interfaces: Impedance updated. 3.3.2: 2 nd bullet updated. 3.4: Cross-reference added (to new section 8.1.6). 3.5, table 5 updated (Position > Navigation; NMEA HDT added). 4.4.2: (a) and (b) updated. NEW 6.4: High-Frequency Gating. NEW 8.1.6: Updating Transducer Models. 8.3.2: Caution added to bullet list. D.1: 1 st paragraph of Limited Warranty elaborated. (appendix on System Options removed.)
5	9 Sep 2022	4.4.4: Graphic added for Triggering - Output Trigger. 8.1.3: Maintenance of echosounder dust filters elaborated. App. A.2: Added subheadings for each drawing.
4	16 Jun 2022	Cautions added about not transmitting without a transducer: 3.2: last bullet added. 5.2: Caution boxes added to 5.2.1 and 5.2.2.
3	28 Sep 2021	Screen shots updated in 4.4.1, 4.4.2, 5.2.1.3, 5.2.2.1, 5.2.2.2, 5.2.2.3, 5.4, 6.2, 8.1.4. 2.4: Neptune 390 200kHz added to table 4. 4.4.1: New item (d) on draft and index added. 4.4.2: Updated bullets under item a). 4.4.3.3: Item b) updated. 4.4.4 Triggering - Output Trigger: NEW section. 5.2.1.3: Bullets and Note box updated. 5.2.2.1: Second bullet updated. 5.2.2.2: Note box updated. 6.3 Gates: NEW section. 6.4 Print: NEW section. C.6: > "the following three strings" (not "two"). App. E: Standard Warranty Information updated. App. F: Support and Service updated.

Version	Date	Remarks
2	25 May 2021	AC power supply elaborated in 2.1 and 4.2.1, and figure 4 updated. Section 2.2 Performance updated. Section 2.6 CE Marking added with CE Declaration of Conformity.
1	18 Dec 2020	Initial release

Copyright Teledyne RESON A/S 2020-2023

Copyright Statement	All rights reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, as per the copyright laws of Denmark. DESO 5DS Operator's Manual written by: Teledyne RESON A/S Fabriksvangen 35 3550 Slangerup Telephone: +45 47 38 00 22 Facsimile: +45 47 38 00 66 Web: http://www.teledynemarine.com/reson E-mail: reson-support@teledyne.com	
Notice	The information contained in this document is subject to change without notice. Teledyne RESON makes no warranty of any kind with regard to this material, including (but not limited to) the implied warranties of merchant liability and fitness for a particular purpose. Teledyne RESON shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.	
Copyright Release	No part of this manual may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or machine readable language, in any form or by any means for disclosure to third parties without the express written consent of Teledyne RESON A/S.	
Version	May 2023	Version 6
	Teledyne RESON strives to maintain up-to-date information and may, as necessary, review and revise this manual. If the information contained in this manual is unclear, please contact your nearest Teledyne RESON office for clarification.	
Electronic File Version	This manual is available from Teledyne RESON in the Adobe® Acrobat® Portable Document Format (PDF). The selected PDF process preserves the interactive index and cross-reference features of the original Microsoft Word document.	

CONTENTS

0	Preface.....	9
0.1	Document Conventions.....	9
0.2	Warnings, Cautions, and Notes	9
0.3	Glossary	9
0.4	Inventory	11
1	Introduction	13
1.1	System Overview	13
1.2	System Architecture	13
1.3	Main Features	14
1.4	Typical Applications	14
2	Safety Precautions	15
2.1	Operator Safety.....	15
2.2	Equipment Safety.....	15
2.3	Maintenance.....	16
2.4	Safe Disposal of Waste (WEEE Directive).....	16
3	Product Description.....	17
3.1	Specifications	17
3.2	Performance.....	18
3.3	Standard Data Products.....	19
3.3.1	Depth Output via Serial Port	19
3.3.2	Echograms	19
3.4	Supported Transducers.....	20
3.5	Supported Auxiliary Sensors.....	21
3.6	CE Marking	22
4	Installation.....	23
4.1	DESO 5DS Mounting	23
4.2	DESO 5DS.....	24
4.2.1	Rear Panel Cable Connections.....	24
4.2.2	Front Panel.....	25
4.3	Transducer Installation.....	26
4.3.1	Through Hull.....	26
4.3.2	Hull Mount	27
4.3.3	Sea Chest	27
4.3.4	Over the Side	27
4.4	Configuration in SBES UI.....	28
4.4.1	Transducer Configuration.....	28
4.4.2	Auxiliary Sensors	29
4.4.3	Time Synchronization.....	29
4.4.4	Triggering – Output Trigger.....	31
5	Operation	32

5.1	Get Started	32
5.2	Operation Modes.....	32
5.2.1	Mobilize Modes	33
5.2.2	Survey Modes	34
5.3	Standalone Operation	35
5.4	SBES UI BITE	36
6	The DESO 5DS in Action.....	37
6.1	Operation Modes.....	37
6.2	Marking	37
6.3	Gates.....	38
6.4	High-Frequency Gating	38
6.5	Print.....	39
6.6	Interference Considerations	39
6.6.1	Cavitation	39
6.6.2	Machinery Noise	40
6.6.3	Electrical Noise	40
6.6.4	Interference from Other Echosounder Systems.....	40
6.6.5	Speed.....	40
6.6.6	Air Bubbles.....	40
6.6.7	Environment	41
7	Troubleshooting	42
7.1	The DESO 5DS does not seem to be working.....	42
7.2	The DESO 5DS power LED is off	42
7.3	What are the COM port settings?.....	42
7.4	Known problems with Transducer.....	42
8	Handling and Maintenance	43
8.1	DESO 5DS	43
8.1.1	Handling	43
8.1.2	Maintenance.....	43
8.1.3	Dust Filter.....	43
8.1.4	System Tool –Software Update	44
8.1.5	Recovery	46
8.1.6	Updating Transducer Models	47
8.2	Transducer	48
8.2.1	Handling	48
8.2.2	Maintenance.....	49
8.3	Power/Data Cable	49
8.3.1	Handling	49
8.3.2	Maintenance.....	49
Appendix A –	Reference Documentation	50
A.1	DESO 5DS Documentation.....	50
A.2	DESO 5DS Design Documents.....	50
A.2.1	DESO 5DS Outline.....	51

A.2.2	Converter Transducer Cable (optional component, PN 1013713-DK).....	52
A.2.3	Extender Transducer Cable (optional component, PN 1013700-DK)	53
A.3	Licenses – Copyright Information.....	54
Appendix B –	Cable Connectors	56
B.1	TX1 and TX2 (male connectors)	56
B.2	COM1-3 Ports (DB9 RS232 male connectors)	56
B.3	COM4-5 Ports (DB9 RS422/485 male connectors)	56
B.4	LAN	56
Appendix C –	Serial and UDP Output String Formats	57
C.1	Echotrac DBX (for Universal message)	57
C.2	Echotrac SBT, Single Bottom Tracking (for depth).....	58
C.3	Echotrac DBT, Dual Bottom Tracking (for depth)	58
C.4	DESO25 (for depth)	59
C.5	NMEA 0183 DBS, Depth Below Surface.....	59
C.6	DESO DDV (for heave, draft, and sound velocity)	60
Appendix D –	Standard Warranty Information	61
D.1	Limited Warranty	61
D.2	Warranty Exclusions	61
D.3	Warranty Limitations	61
D.4	Servicing During Warranty Period.....	61
Appendix E –	Support and Service.....	62
E.1	Support.....	62
E.2	Returning Goods for Service.....	62

FIGURES

Figure 1: DESO 5DS Singlebeam Echosounder System	13
Figure 2: DESO 5DS Singlebeam Echosounder System Configuration	13
Figure 3: DESO 5DS.....	23
Figure 4: DESO 5DS rear panel cable connections.....	24
Figure 5: Transducer mounted through the hull.....	26
Figure 6: Transducer mounted over the side	27
Figure 7: Visualization of Output Trigger Methods.....	31
Figure 8: Operation modes	32
Figure 9: Bar check mode.....	33
Figure 10: SBES UI BITE.....	36
Figure 11: Echogram window with three marker annotations	37
Figure 12: A-scan window with gates	38
Figure 13: SBES UI with High-Frequency Gating enabled	38
Figure 14: Echosounder dust filter location.....	43
Figure 15: DESO 5DS outline	51
Figure 16: Converter transducer cable (optional component, PN 1013713-DK)	52

Figure 17: Extender transducer cable (optional component, PN 1013700-DK).....	53
---	----

TABLES

Table 1: Standard scope of delivery	11
Table 2: Optional components.....	11
Table 3: Specifications.....	17
Table 4: Supported transducers.....	20
Table 5: Supported auxiliary sensors.....	21
Table 6: DESO 5DS rear panel cable connections.....	24
Table 7: BITE icons.....	36
Table 8: WPFDXInterop – Copyright Information	54
Table 9: DirectXTK – Copyright Information	54
Table 10: Json.NET – Copyright Information	54
Table 11: mvvmLight – Copyright Information	54
Table 12: SharpAvi – Copyright Information	55
Table 13: Math.NET – Copyright Information	55
Table 14: Echotrac DBX	57
Table 15: Echotrac SBT with One Frequency Active (high or low).....	58
Table 16: Echotrac DBT with One Frequency Active (high or low).....	58
Table 17: Echotrac DBT with Both Frequencies Active (high and low).....	58
Table 18: DESO25 with One Frequency Active (high or low).....	59
Table 19: NMEA 0183 DBS with One Frequency Active (high or low)	59
Table 20: DESO DDV Heave.....	60
Table 21: DESO DDV Draft	60
Table 22: DESO DDV Sound Velocity	60

0 PREFACE

This Operator's Manual provides detailed procedures for the correct installation, operation, and maintenance of the DESO 5DS Singlebeam Echosounder system.

Before the system is operated for the first time, it is recommended that users familiarize themselves with the contents of this manual to ensure optimal system performance.

If you require additional information or need clarification of any part of this document, please contact Customer Support for assistance at reson-support@teledyne.com.

0.1 Document Conventions

<i>Hyperlink</i>	Indicates a hyperlinked cross-reference. Click the word to be taken to the specified reference point.
Numbered list	Indicates stepwise instructions to be followed in a particular order.
Bulleted list	Indicates items of a list without any particular order.

0.2 Warnings, Cautions, and Notes

Throughout the manual the following definitions apply and in the format shown.

WARNING!

Warning boxes provide important information regarding your Teledyne RESON system. Disregarding Warnings may prove harmful to personnel working with or near the system.

CAUTION

Caution boxes provide important information regarding your Teledyne RESON system. Disregarding Cautions may result in accidental misuse, damage to the system, or loss of data.

NOTE

Note boxes provide explanatory information that may be useful to the operator, but is not necessarily vital to the operation of your Teledyne RESON system.

If you require additional information or need clarification of any part of this document, please contact the customer support hotline at +45 20 999 088 (Europe) or +1 805 233 3900 (US).

0.3 Glossary

Entry	Definition
1PPS	One pulse per second (the same as PPS)
BITE	Built-In Test Environment
BW	bandwidth
CE	Conformité Européenne
COM	serial port interface (communication port)
CW	continuous wave
DGPS	Differential Global Positioning Systems
ER	extended range
FM	frequency modulation

Entry	Definition
GNSS	Global navigation satellite system
GPS	Global Positioning System
HF	high frequency
HFG	high frequency gating
IHO	International Hydrographic Organization
IP	IP Code, Ingress Protection Rating is a classification system that rates to what degree an enclosure is protected against the intrusion of solid objects (incl. dust) and water.
LAN	local area network
LED	light-emitting diode
LF	low frequency
LINZ	Land Information New Zealand
N/A	Not available or not applicable
RMA	Return Material Authorization
RX	receiver
SBES	singlebeam echosounder
SL	source level
SVP	Sound Velocity Probe
SYNC	synchronization
TBD	To Be Defined
TVG	Time Varied Gain
TX	transmitter
UI	user interface
VDC	volts direct current

0.4 Inventory

Table 1: Standard scope of delivery

Description		Quantity
DESO 5DS dual channel		1

Part number	Description	Quantity
1011057-DK	SHIP CASE, KIT, STENCILED, RSP, INS, BRACKET TELEDYNE-RESON LOGO Shipping case with handles, DESO 5DS and accessories, 585x361x238mm, 6kg	1
SB9999/00057	Cable, power, 230 volt, EU standard, 2.5m	1
88100610	Cable, power, 230 volt, UK standard, 2.5m, black, w. ground	1
60000002	Cable, power, 3-Cond NEMA5-15P TO IEC Feller 2.0m	1
1012635-DK	Bag, zipper, neoprene, light blue 250x200x8mm, TELEDYNE MARINE logo and www	1
1012320-DK	Connectors for Transducers 7/8" with 5 pins with dust caps CONN,CIRC,SCREW,7/8,5p,600V,8A,STRAIGHT M, for cable mount (7/8" connector 5 pole male, e.g. GT272254-32050)	2
1012767-DK	Cable Assy,DustCap Plastic for 7/8 male end with cord, 120mm	2
1015870-DK	Memory stick, USB - for manuals and SW, DESO 5DS	1
1015872-DK	Quick Reference Guide, DESO 5DS	1
1013832-DK	Quick Start Guide, SBES User Interface	1

Table 2: Optional components

Part number	Description
1013713-DK	Cable Assy, Converter transducer cable, 7/8 5 pole male to mill spec 5 pole female(PT01J-14-5S), 40cm Enables connection of transducers with military connector (CV100/200/300/MKIII standard) to the DESO 5 (7/8" 5 pole).
1013700-DK	Cable Assy, Extender transducer cable, 7/8 5 pole male to 7/8 5 pole female, 25m
KIT1014587	Filter kit for RSP, 3 pcs 72 x 72 mm PPI 20

NOTE

Please contact Teledyne Marine for consultancy on our available transducers, DGPS position and motion sensors, sound velocity profilers, or specialized hydrographic software solutions.

1 INTRODUCTION

1.1 System Overview

The DESO 5DS Singlebeam Echosounder is a dual-channel echosounder. The DESO 5DS for rackmount installation is designed for very fast mobilization on any type of survey vessels, securing minimal interfacing and low space requirements.



Figure 1: DESO 5DS Singlebeam Echosounder System

1.2 System Architecture

A typical DESO 5DS survey system consists of the following main components:

- DESO 5DS singlebeam echosounder
- Transducer
- DGPS sensor, heave sensor, heading sensor (optional)
- Sound velocity profiler
- Laptop with SBES UI and hydrographic software

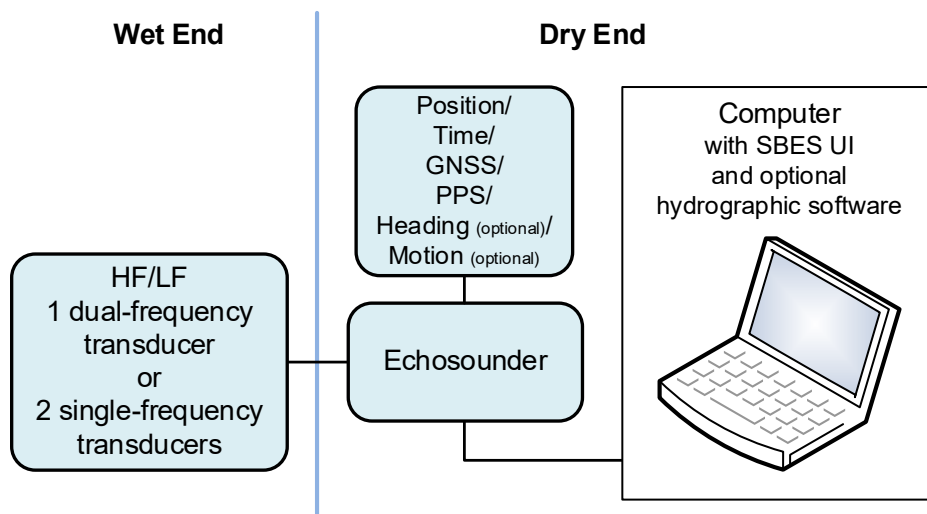


Figure 2: DESO 5DS Singlebeam Echosounder System Configuration

1.3 Main Features

- **Bottom detection:** The DESO 5DS provides the most reliable and robust bottom tracking available for precise and repeatable survey results. Its bottom tracking algorithms are based on our multibeam and singlebeam experience and relies on the proven technology from SeaBat, Echotrac, ParaSound, and HydroSweep sonars.
- **Built-In-Test-Environment (BITE):** The BITE is an integral part of the sonar processing unit monitoring the status of the internal electronic sub-systems. The BITE function is designed to inform the operator that the system is performing normally and, therefore, that vessel time is being utilized effectively. In the event of any errors, the operator is informed immediately for prompt troubleshooting.
- **Dual channel:** The DESO 5DS dual-channel echosounder offers the full flexibility for simultaneous two-channel survey operation in shallow waters.
- **Full ocean coverage:** The DESO 5DS provides all the power needed enabling surveys down to 12,000m, an output of up to 5kW (depending on transducer), and longer chirped pulses.
- **SBES User Interface:** Intuitive user-friendly operator software.
- **Standard data output:** The DESO 5DS provides bathymetry and echogram data in a standard format for easy interfacing.
- **Automatic operation mode:** Based on the reflectivity of the seabed this mode automatically optimizes all sonar settings. The Automatic mode maximizes the ping rate and optimizes other sonar settings for bathymetry data acquisition by ensuring that returning echoes are not saturated. The Automatic mode is designed to reduce operator workload and skill level requirements, and thus reduce risk of operator error.

1.4 Typical Applications

- As-built surveys
- Coastal mapping
- Environmental research
- Habitat mapping
- Harbor mapping
- Hydrographic surveys to IHO, LINZ, and U.S. Army Corps of Engineers standards
- Pre- and post-dredging and condition surveys
- River surveys
- Site clearance surveys

2 SAFETY PRECAUTIONS

WARNING!

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Teledyne assumes no liability if this product is operated in an unsafe manner.

CAUTION

Use of the equipment in a manner not specified by the manufacturer may affect warranty situation (see *Appendix D – Standard Warranty Information*).

2.1 Operator Safety

The DESO 5DS system should be handled with attention to operator safety as well as protection of the hardware components. General precautions include:

- **Do not** connect or disconnect cables with the power on.
- **Do not** attempt to open and service the DESO 5DS echosounder without specific instructions from Teledyne Marine.
- **Do not** attempt to open and service the transducer.

WARNING!

Exposure to high-energy acoustic transmission, even outside the audible frequency range, may cause severe health injury

Avoid direct exposure to acoustic transmission:

- Wear hearing protection while in same room during higher energy tests.
- Make sure not to be in direction of sound transmission or directly behind the transmitter during emission.

Hearing protection must be worn when in the vicinity of low frequency high power transducers to avoid any hearing loss.

WARNING!



This icon on any of the components implies hazardous voltage on output connection.

2.2 Equipment Safety

Use appropriate discretion when handling the system components. The following list includes general precautions:

- Inspect each transit case or shipping box for physical damage prior to opening, and each component for physical damage before installation.
- Use original shipping boxes to provide adequate packaging and shock absorption when shipping or storing the equipment.
- Be careful to lift the equipment correctly, as it may be heavy.
- Do not drop the equipment.
- Do not connect or disconnect cables at the rear of the DESO 5DS while the unit is running. This can damage the internal workings.
- Do not scratch the transducer. Place the unit on a clean surface and away from items that may damage it.

- Do not lift the equipment by the cables.
- Do not bend cables beyond the recommended limits.
- Do not exceed operating and storage temperature limits.
- Unused connectors should be sealed with dummy plugs.
- Do not place any objects on top of the DESO 5DS and do not expose the unit to direct sunshine, as this may cause the unit to overheat.
- Do not transmit without a transducer attached to the DESO 5DS or with the transducer in air.

2.3 Maintenance

For instructions on maintenance of echosounder, cables, and transducers, see *chapter 8 Handling and Maintenance*.

2.4 Safe Disposal of Waste (WEEE Directive)



The use of the logo to the left indicates that this product is subject to directive 2012/19/EU, known as the Waste Electrical and Electronic Equipment Directive.

The WEEE Directive specifies that used electric/electronic equipment may not be treated as household waste, but must be sorted separately for disposal. By ensuring this product is disposed of correctly, you will help protect the environment.

For more details about the recycling of this product, please contact your local authority, your household waste disposal service provider, or Customer Support at reson-support@teledyne.com.

3 PRODUCT DESCRIPTION

NOTE

Stated accuracies and depth ranges are frequency and transducer dependent and may be impacted by other auxiliary equipment, environmental conditions, vessel installation, and motion.

3.1 Specifications

Table 3: Specifications

Parameters	Dual channel
Operating frequency	10-250kHz per channel
Channel	Dual: HF channel optimized for 30-250kHz LF channel optimized for 10-50kHz
Ping rate	Up to 50 pings/s
Pulse type	CW and FM (chirp)
Pulse length	Fully variable from 1 cycle upwards (e.g. 1ms, 5000W, 20-50kHz, 50 Ohm)
Bandwidth	Max. 45kHz
Data output	<u>Via LAN interface:</u> For each channel the measured depth and full amplitude-time echogram, passed through auxiliary sensor data, s7k data protocol. <u>Via serial port:</u> For each channel the measured depth
AC power supply ¹	100-230VAC, 50/60Hz WARNING! For safety purposes, the DESO 5DS must be connected to protective earth. The protective earth pin in the AC connector is the protective conductor terminal of DESO 5DS.
Power consumption	Max. 300W
Transducer interfaces	Impedance: 50Ohm < nominal load < 200Ohm Max. power: 5kW @ 0.6% duty cycle / 1.5kW @ 2% duty cycle Connection: • Single-connector TX1 for dual transducer • Two separate connectors TX1 and TX2 for separate transducer cables
Interfaces	3 serial connectors (RS232): • Input: GPS position and time, heave, motion • Output: depth 2 alternative serial connectors (RS422/RS485) • Input: GPS position and time, heave, motion 1 Ethernet LAN connector 3 BNC connectors (for PPS input, trig input and trig output)
Dimensions	Height: 86.0mm Length: 478.0mm Depth: 461.6mm
Weight	12.0kg max. (excl. external cables and transducers)
Temperature	Operating: -5°C to +55°C Storage: -30°C to +70°C
Vibration	Complies with standard EN 60945 § 8.7

¹ Use the power cord delivered with the system.

3.2 Performance²

Parameters	Dual channel ER
Accuracy	2cm + 0.1% of depth @200kHz 10cm + 0.1% of depth @33kHz 15cm + 0.1% of depth @12kHz
Resolution	1cm @200kHz 5cm @33kHz 15cm @12kHz
Min. depth range	0.35m @200kHz 1.0m @33kHz 3.0m @12kHz
Max. depth range	400m @200kHz 3,000m @33kHz 12,000m @12kHz

² The depth values are based on the performance of TC2122 for 200 and 33kHz, and HM210/12-8/20 for 12kHz. Stated depth ranges may be impacted by environmental conditions, vessel installation, and motion.

3.3 Standard Data Products

3.3.1 Depth Output via Serial Port

The DESO 5DS is capable of generating ASCII depth data messages via serial or UDP port COM3.

The following depth data messages are supported by the DESO 5DS:

- Depth
 - Echotrac SBT
Example: "<sp>et<sp><sp>54321<CR>"
 - Echotrac DBT
Example: "<sp>ETOL<sp>54321<CR>"
 - DESO25
 - NMEA 0183: \$SDDBS
Example: "\$SDDBS, 3.3,f,1.9,M,0.6,F*AB"
- Motion
 - DESO DDV Heave
Example: "DH01.23<sp>m<CR><LF>"
- Draft
 - DESO DDV Draft
- Sound velocity
 - DESO DDV Sound Velocity
- Universal message
 - Echotrac DBX
Example: "\$DBX,2019-09-30T205959.999,2,00123.999,-216.14,00.950,00124.321,-218.14,01.100,1,-002.230,1,1435.98<CR><LF>"

For details, see *Appendix C – Serial and UDP Output String Formats*.

3.3.2 Echograms

The DESO 5DS provides raw data of both channels on Ethernet, in s7k format, including all auxiliary sensor data of sensors connected to the echosounder.

- The raw echogram information is in full resolution of sampling rate.
- The data of all auxiliary sensors connected to the DESO 5DS, such as Heave, Heading, and GNSS, are provided in the s7k record in full resolution as well.
- Acoustic basic information, such as used transmit pulses, basic echosounder settings, operation modes, and receive gain, is part of the s7k record as well, to allow receiving software to interpret the raw echogram values in a meaningful way.

The main singlebeam record types are 10000 SBES channel settings, 10018 SBES echogram water column data, and 100027 SBES raw detection data. For details, refer to the Data Format Definition document (see *Appendix A – Reference Documentation*).

3.4 Supported Transducers

The DESO 5DS can generally be adapted to a wide range of transducers. Performance and features of the singlebeam echosounder depends on the selected transducer. The selectable transducers are listed in *Table 4*.

For installation, see *section 4.3 Transducer Installation*.

For configuration, see *section 4.4 Configuration in SBES UI*.

To add new transducer models see *section 8.1.6 Updating Transducer Models*.

Table 4: Supported transducers

Name	High freq.	Low freq.	Description
SINGLE FREQUENCY			
Odom FMBB200-9	200kHz, 9°		200kHz, 9°, flange mount, M194 housing
Odom HM12-20-T198		12kHz, 20°	12kHz, 20°, hull mount, T198 housing
Odom HM15-17 15kHz 17deg		15kHz, 17°	15kHz, 17°
Odom SMBB200-9	200kHz, 9°		200kHz, 9°, stainless steel, stem mount, SS510-2 housing
Odom SMBB200-3	200kHz, 3°		200kHz, 3°, stainless steel, stem mount, SS549 housing
Odom SMSW200-4A	200kHz, 5°		200kHz, 5°, stem mount, shallow water, SS538 housing
Odom TM24-20		24kHz, 20°	24kHz, 20°, tank mount, M192-2 housing
Odom TM33-19		33kHz, 19°	33kHz, 19°, tank mount, M192-6 housing
RESON TC2003	200kHz, 3°		200kHz, 3°
RESON TC2024	200kHz, 9.5°		200kHz, 9.5°, shallow water
Airmar SS510 200kHz	200kHz, 8°		200kHz, 8°, shallow water
Airmar SS538 200kHz	200kHz, 5°		200kHz, 5°, shallow water
Airmar SS549 200kHz	200kHz, 3°		200kHz, 3°, shallow water
Airmar M192-2 24kHz		24kHz, 24°	24kHz, 24°
Airmar M192-6 33kHz		33kHz, 19°	33kHz, 19°
Airmar M194 200kHz	200kHz, 8°		200kHz, 8°
Neptune 390 200kHz NEW	200kHz, 8°		200kHz, 8°, hull mount, over the side
Neptune T198		12kHz, 20°	12kHz, 20°, deep water, hull mount
_unknown ³		12kHz	12kHz, 20°
_unknown		15kHz	15kHz, 20°
_unknown		24kHz	24kHz, 20°
_unknown		33kHz	33kHz, 20°
_unknown	200kHz		200kHz, 7°
_unknown	210kHz		210kHz, 7.5°

³ Generic transducers/frequencies listed as “unknown” have reduced operating parameters to ensure hardware is protected. They can be used where the transducer is not directly supported by the DESO 5DS or is unknown.

Name	High freq.	Low freq.	Description
DUAL FREQUENCY			
Odom HM200/12-8/20	200kHz, 8°	12kHz, 20°	200/12kHz, 8/20°, hull mount, T197 housing
Odom HM210/12-8/20	210kHz, 7.5°	12kHz, 20°	210/12kHz, 7.5/20°, hull mount, T196 housing
Odom HMBB200/24-4/20	200kHz, 4°	24kHz, 20°	200/24kHz, 4/20°, hull mount, M175-2 housing
Odom OTS200/33-8/23	200kHz, 7°	33kHz, 23°	200/33kHz, 7/23°, over the side, M191 housing
Odom OTSBB200/24-4/20	200kHz, 4°	24kHz, 20°	200/24kHz, 4/20°, over the side, M42 housing
Odom OTSBB200/33-5/23	200kHz, 5°	33kHz, 23°	200/33kHz, 5/23°, over the side, M177-2 housing
Odom THP200/24-4/20	200kHz, 4°	24kHz, 20°	200/24kHz, 4/20°, tank, hull, pole, M108 housing
RESON TC2122	200kHz, 10°	33kHz, 22°	200/33kHz, 10/22°
RESON TC2178	200kHz, 9.5°	33kHz, 22°	200/33kHz, 9.5/22°, hydrodynamic, over the side applications
Airmar M42-200/24	200kHz, 5°	24kHz, 20°	200/24kHz, 5/20°
Airmar M177-200/33	200kHz, 8°	33kHz, 23°	200/33kHz, 8/23°
Airmar M191 200/33	200kHz, 7°	33kHz, 23°	200/33kHz, 7/23°
Airmar R509LM 28-60/80-130 NB	120kHz, 8°	60kHz, 7°	130/60kHz, 8/7°, narrow band
Airmar R509LM 28-60/80-130 WB	105kHz, 10°	45kHz, 10°	105/45kHz, 10/10°, wide band
Airmar M563 35/100	100kHz, 10°	35kHz, 12°	100/35kHz, 10/12°
Airmar M563 200/40	200kHz, 4°	40kHz, 16°	200/40kHz, 4/16°
Airmar M563 200/28	200kHz, 4°	28kHz, 22°	200/28kHz, 4/22°
Neptune T196	210kHz, 7.5°	12kHz, 20°	210/12kHz, 7.5/20°, deep water, hull mount
Neptune T197	200kHz, 8°	12kHz, 20°	200/12kHz, 8/20°
Kongsberg Simrad 38/200 D	200kHz, 7°	38kHz, 17°	200/38kHz, 7/17°

3.5 Supported Auxiliary Sensors

Table 5: Supported auxiliary sensors

Position/Time	Motion ⁴
NMEA GGA	TSS1
NMEA GLL	EM1000
NMEA ZDA	EM3000
NMEA HDT	OCTANS TAH
Up to 10Hz sample rate	Up to 50Hz sample rate

⁴ Only the heave component is used by the DESO 5DS.

3.6 CE Marking

EC DECLARATION OF CONFORMITY

We Teledyne RESON A/S
Fabriksvangen 13
3550 Slangerup
Denmark



in accordance with the following directive(s):

2014/30/EU Electromagnetic Compatibility (EMC)
2014/35/EU Low Voltage (LVD)

hereby declare that the following equipment:

DESO 5DS singlebeam echosounder

is in conformity with the applicable requirements of the following standards:

REF. No.	TITLE	EDITION/DATE
IEC 60945 §5.2.2, §5.2.3, §10.7, §10.8	Maritime navigation and radio communication equipment and systems - General requirements - Methods of testing and required test results.	2002-08
EN 61010-1	Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements.	2010

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications. The unit complies with all applicable essential requirements of the directives.

Location: Slangerup, Denmark

Date: 31 March 2021

Name: Ole Søre-Pedersen

Position: Vice President & General Manager

Signature: _____



Document No. CERT22189

4 INSTALLATION

4.1 DESO 5DS Mounting

The DESO 5DS is a flexible unit designed for rack mounting.

- Mount the DESO 5DS within easy reach of operator workstation connections, interconnect cables, and power switch.
- Use the four holes on the front of the unit to secure it to the rack.
- Allow clearance around the unit to provide adequate air circulation.



Figure 3: DESO 5DS

4.2 DESO 5DS

4.2.1 Rear Panel Cable Connections

The dry-end cable provided by Teledyne RESON comes with a factory-installed connector. All required cables are easily attached at the appropriate ports clearly marked on the rear panel of the DESO 5DS (see *Figure 4*).

CAUTION

Do not disconnect any cables from the rear of the DESO 5DS while the unit is running. This can damage the internal workings of the unit.

Table 6: DESO 5DS rear panel cable connections

Connector	Description
Grounding	Protective earth screw for equipotential connection
Power	AC power supply: 100-230V, 50/60Hz, max. 300W
TX1 and TX2 	Transducer connections, one or two channels can be connected
LAN	Gigabit Ethernet
COM1, COM2, COM3, each with status LED	RS232 serial ports for external sensors and serial sounding data - Yellow, flashing: Data is transmitted - Green, flashing: Data is received
COM4, COM5, each with status LED	RS422/RS485 serial ports for external sensors - Yellow, flashing: Data is transmitted - Green, flashing: Data is received
PPS in with status LED	Incoming 1PPS signal Yellow, flashing: PPS is received
Trig in with status LED	External trigger input Yellow, flashing: External trigger input is received
Trig out with status LED	Output of trigger signal Green, flashing: Trigger output signal



Figure 4: DESO 5DS rear panel cable connections

WARNING!

For safety purposes, the DESO 5DS must be connected to protective earth. The protective earth pin in the AC connector is the protective conductor terminal of DESO 5DS.

NOTE

The status LEDs will only be lit, when the DESO 5DS is connected to power.

CAUTION

To disconnect the connectors from the DESO 5DS, first unscrew the locking sleeves (at the arrow) before pulling the connectors out.

Do not pull directly on the cords, as this will damage both the cables and the DESO 5DS.

Do not bend the cables beyond the recommended limits when positioning them. Flexing the cables to less than the specified bend radius will damage the cables.


**WARNING!**

The projector connections must be handled with great care, as the output power voltage is hazardous to human safety.

Do not pull out the cables with the power on.

**4.2.2 Front Panel**

The power button and BITE LEDs are located on the front of the DESO 5DS.

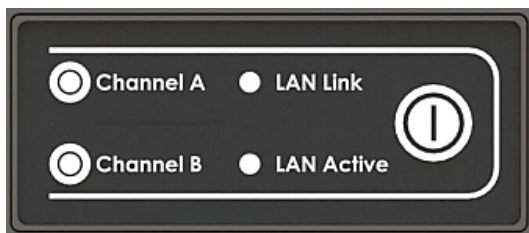

- **Channel A/B buttons:**
 - Pressing both buttons at power up forces the unit into Recovery mode⁵.
 - Pressing during operation starts/stops pinging.
- **Channel A/B LEDs:**
 - No light: Channel off.
 - Green: Channel on.
 - Orange, flashing: Receiving a ping.
 - Red: Error.
- **LAN Link LED:**
 - Yellow: A link has been established.
- **LAN Active LED:**
 - Green, flashing: Data is received/transmitted.
- **Power button:**
 - A short push enters/exits standby.
 - Pushing for more than 5 seconds reboots the system.
- **Power button light indicator:**
 - No light: Not connected to power.
 - Blue: Booting.
 - Red, flashing: In transition to "standby".
 - Red: On standby.
 - Green, flashing: In transition to "on".
 - Green: Turned on, normal operation. Status OK.
 - Orange: Warning.
 - Purple: Booted to update/recovery mode.

⁵ Recovery mode is a safe mode. For details, see *appendix 8.1.5 Recovery*.


4.3 Transducer Installation

- The transducers are generally supplied with connectors assembled in Dual Channel cable arrangement. When preparing the initial setup of the survey system, the SBES UI will suggest the standard cable connection depending on chosen transducer type (see *section 4.4 Configuration in SBES UI*).
- In all types of installations, the transducer radiating face must remain as parallel to the water surface as possible while the vessel is moving.
- Transducers should be mounted at least 0.3 meter below the waterline.
- A preferred mounting location is near the keel of the vessel in an area where the planing attitude of the hull at speed and the pitch and roll angles of the vessel in seas have the least effect.
- The transducer should be mounted far enough aft of the bow so that bubbles generated by the bow wave will not pass over the face of the unit.
- Transducers should be located away from sources of turbulence and cavitation bubbles such as propellers, bow thrusters and hull protrusions.
- Considerations should also be given to sources of mechanical noise generated within the vessel (engines, props, pumps, generators, etc.). In some severe cases of mechanically coupled noise, vibration-isolating mounts may be required to decouple the transducer from the hull.

For further details on possible sources of interference with the transducer installation, see *section 6.6 Interference Considerations*.

4.3.1 Through Hull

The top side of the transducer is accessible from inside the vessel while the transducer face is exposed to the water.

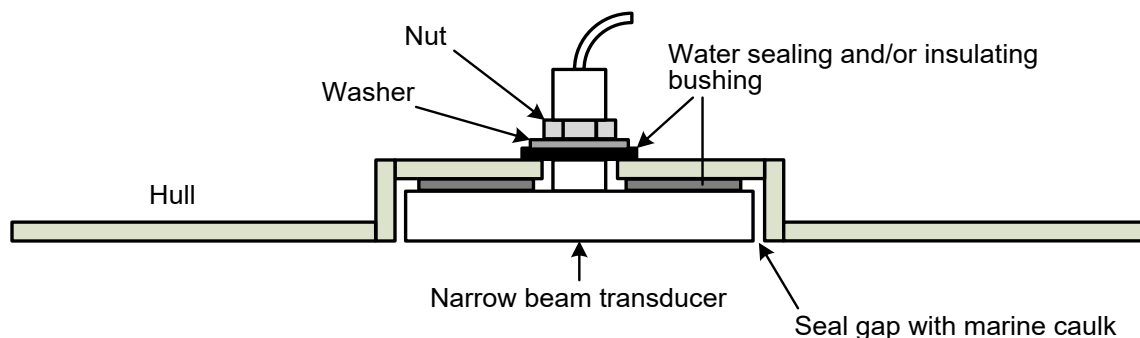

NOTE: Transducer must be flush with hull

Figure 5: Transducer mounted through the hull

WARNING!

Ensure that installations through the hull are made correctly to ensure the safety of the personnel and boat.

NOTE

Avoid turbulence around the transducer by installing a fairing with a sloping forward edge ahead of the unit. The fairing will improve the hydrodynamic performance by smoothing the flow of water over the face of the transducer.

CAUTION

Care should be taken to protect the transducer from damage. The installation of a fairing will contribute to reducing the risk of impact damage.

4.3.2 Hull Mount

Streamlined transducers mounted directly to the outside of the hull or transducers fitted into streamlined fairings welded or otherwise attached to the outside of the hull often make for excellent installations. The advantage is that the radiating face of the transducer is generally below the bubble stream in clear water and no acoustic window or transducer tank creates reverberation.

This type of installation requires a stuffing tube to be installed in the hull in order to allow the transducer cable to penetrate the hull.

4.3.3 Sea Chest

In a sea chest mount, a fluid-filled enclosure in the hull of the vessel is large enough to contain the entire transducer. The outer hull is removed in the area of the chest and replaced with an acoustically clear "window" which is mounted flush with the hull.

Depending on construction, material selected for the acoustic window, and draft of the vessel, access to the transducer can often be gained from inside the hull without putting the vessel in dry dock.

In most installations, a water-filled standpipe is incorporated into the sea chest design in order to provide hydrostatic pressure equalization. Transducer cables generally leave these assemblies through stuffing tubes, which maintain the watertight integrity of the chest.

4.3.4 Over the Side

This type of mount is frequently constructed from a length of pipe. This fixture should be sized to position the transducer well below the waterline and the pipe then fixed to a sturdy support on the vessel. Lines are usually attached to the transducer pipe and tied off fore and aft in order to maintain a stable, horizontal transducer attitude.

NOTE

Ensure that the transducer is mounted sufficiently deep so that it does not break the surface during vessel roll motions. This may mean to a depth greater than 0.3m.

Vibration and oscillation will become evident, if the transducer is not rigidly mounted. To minimize the unsupported length, place a support as close to the waterline as possible.

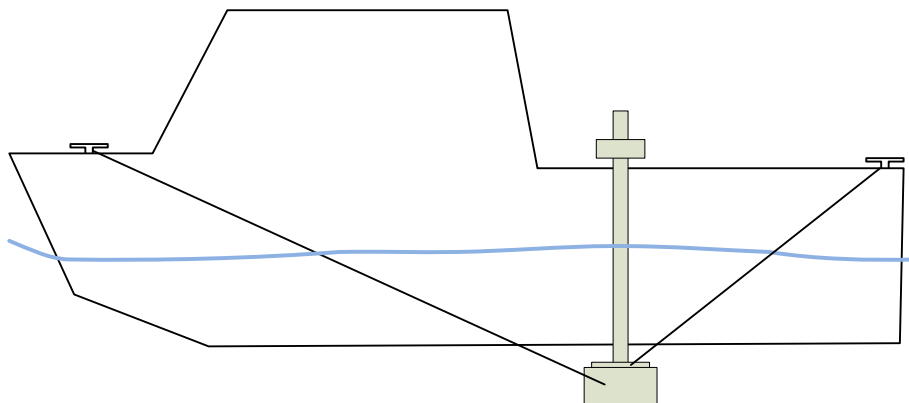


Figure 6: Transducer mounted over the side

CAUTION

Care should be taken to assure adequate protection for the transducer cable, particularly at the point where the cable leaves the transducer body.

4.4 Configuration in SBES UI

4.4.1 Transducer Configuration

The first time you connect to the DESO 5DS unit, the SBES UI will guide you through the necessary steps.

- (a) Click the Echosounder tab to start.



- (b) Click the Connect echosounder drop-down menu and select the IP address with the serial no. of your DESO 5DS system.

Find the serial no. on the front of the DESO 5DS.

- (c) Select the correct transducer type from either the Channel A or Channel B drop-down menu.

If you don't know what model you have installed, select one of the 5 "unknown" transducers listed with the relevant frequency.



- (d) Enter the draft and/or index of the transducer, per channel.

Draft is the distance between the waterline and transducer face. This value can only be positive and adds to the measured range the sonar makes in the depth output.

A positive index value subtracts from the calculated depth. A negative index value adds to the calculated depth.

- (e) Make your choice of Meter or Feet.
- (f) Choose a method of time synchronization. GPS, NTP and SBES UI PC time are the supported options.

See [section 4.4.3 below](#).

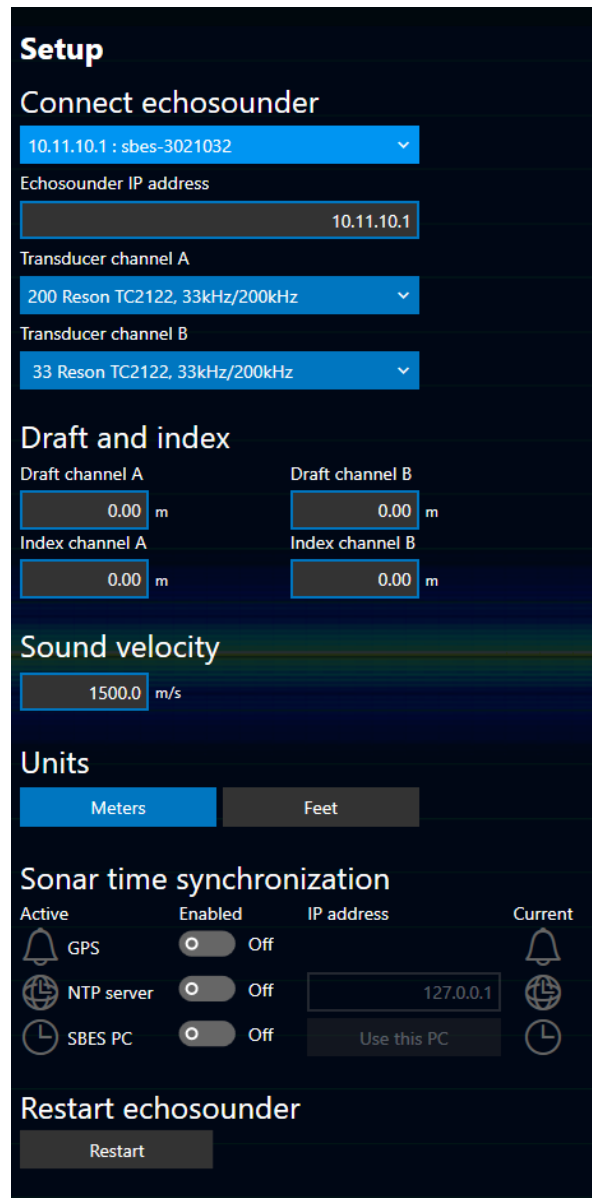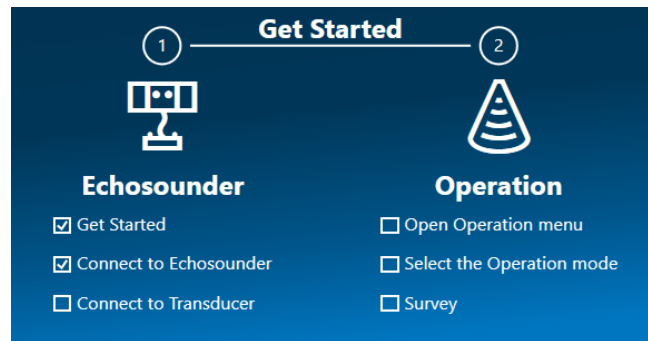

NOTE

When selecting one of the generic "unknown" transducers, range performance suffers, as max. power has been reduced for precautionary purposes.

4.4.2 Auxiliary Sensors

 
- (a) If auxiliary sensors are connected to the serial ports of the echosounder, power up the sensors and ensure that they generate data on the serial or UDP interface.

The inputs to the DESO 5DS are defined as follows.

- Navigation (Position and/or Heading) on one of these:
 - COM 1 (RS232)
 - COM 4 (RS422/RS485)
 - Network UDP
- Motion on one of these:
 - COM 2 (RS232)
 - COM 4 (RS422/RS485)
 - Network UDP
- Output on one of these:
 - COM 3 (RS232)
 - Network UDP

- (b) Follow these steps in the SBES UI:

- (i) Select the Sensor tab.




- (ii) Select the format of your data via the Format drop-down menu.

- (iii) Click on the Serial port button to configure the port on the DESO 5DS to match the settings of the sensor output.

The default configuration is 115200, 8, n, 1. This can be reset at any time by clicking the Set Defaults button in the Serial port dialog.

If using UDP, click on the UDP port button to set the receiving port. The IP address can be set to the PC transmitting or to 0.0.0.0 to listen to all subnet addresses.

- (iv) Enable/disable the input via the radio button under Position and/or Motion. You will see the data parsing/updating in the preview windows for each sensor.

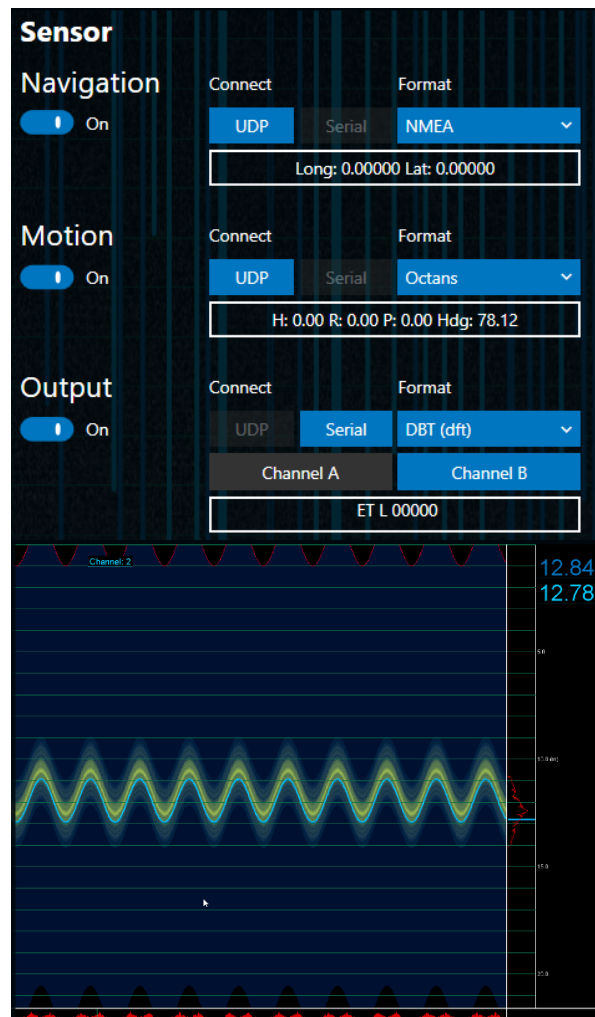

4.4.3 Time Synchronization

There are three ways to control the time in the DESO 5DS:

- Synchronize to the SBES PC.
- Use an NTP Server.
- Use a GPS receiver with PPS output.

Valid time sources are indicated with a blue icon next to the source name. The active source is indicated with a green icon.



NOTE

If multiple time sources are active, the DESO 5DS self-prioritizes the order as follows:

- (a) GPS
- (b) NTP
- (c) SBES UI time

If one source drops out, the DESO 5DS will try to switch to the next active priority. If there is an identifiable large time gap between these sources (several seconds), the DESO 5DS will not use the secondary source, but will flag a time issue. If accepting the large time mismatch and switching to this source, the operator is advised to toggle the source off and on to restart the time synchronization process.

4.4.3.1 Synchronize to the SBES UI PC

To use the SBES PC to control time synchronization, follow this method:

- (a) Connect the UI with the UI from the PC that should provide the time source, and enable the time source and click the button Use this PC.
- (b) Wait a few minutes for time to synchronize.

4.4.3.2 Use an NTP Server

To use an NTP server for time synchronization, follow this method:

- (a) Enable the time source to enter a local or networked address for the NTP server.
- (b) Wait a few minutes for time to synchronize.

4.4.3.3 Use a GPS Receiver

To connect a GPS receiver for time synchronization and position logging, follow this method:

- (a) Configure the GPS to generate an NMEA \$GPZDA sentence every second.
- (b) Connect the serial data to COM1 or COM4, or network UDP.
- (c) Connect the PPS output from the GPS to the SYNC connector on the DESO 5DS. The DESO 5DS cannot use the raw ZDA string for time without the PPS pulse.
- (d) In the SBES UI, select the Sensor tab on the left. Configuration for Position, Motion, and Output is shown. (See also *section 4.4.2 above*.)
- (e) For Position:
 - (i) Click on the Serial or UDP port button and select the appropriate serial or UDP port configuration.
 - (ii) Click the Format drop-down menu and select NMEA.
 - (iii) Enable the input via the radio button.
- (f) Wait a few minutes for time to synchronize.

NOTE

Time synchronization of DESO 5DS to the UI PC only works, if there is no firewall or routing rules that prevent the underlying UDP connection.

4.4.4 Triggering – Output Trigger

The Trig Out BNC connection on the DESO 5DS hardware can be configured on the sensors tab in the SBES UI. Four methods are supported:

- Rx time
- Offset and length
- Tx time
- Tx and Rx time

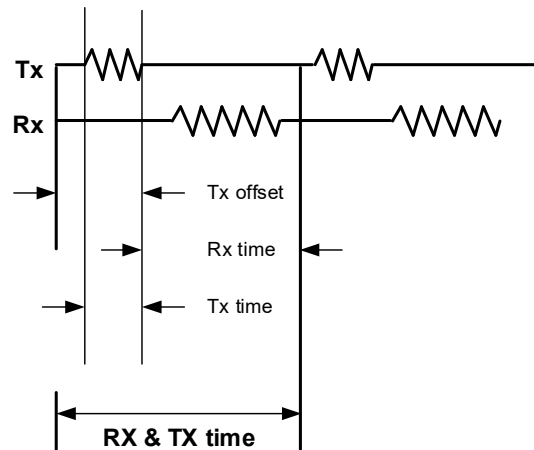


Figure 7: Visualization of Output Trigger Methods

5 OPERATION

5.1 Get Started

Once you have configured the DESO 5DS (see *section 4.4.1 Transducer Configuration*), the SBES UI will guide you through the next steps to get ready for operation.

When restarting the echosounder, the system applies the settings last used. The Get Started screen is displayed, semi-filled in with only the last two steps remaining. The operator just needs to select the desired mode for operation (see *section 5.2 below*), and then the pinging starts.



5.2 Operation Modes

The DESO 5DS is an extremely robust and reliable hydrographic echosounder. Its main operation parameters may be maintained autonomously (fully or partially) or manually.

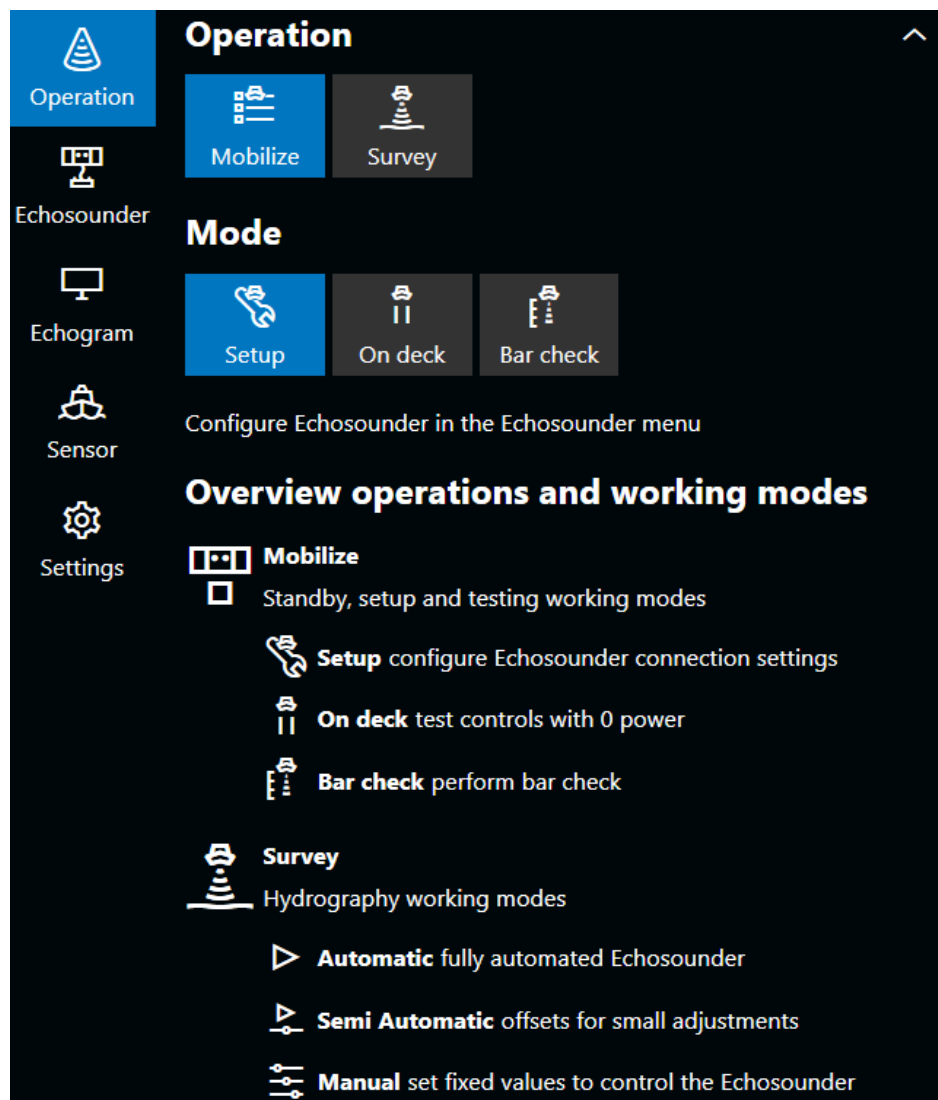


Figure 8: Operation modes

5.2.1 Mobilize Modes

These modes are used for setup and testing of the DESO 5DS.

CAUTION

Do not transmit without a transducer attached to the DESO 5DS or with the transducer in air.

5.2.1.1 Setup

This mode allows configuration and selection of different transducers on channels A and/or B. See *section 4.4 Configuration in SBES UI*.

5.2.1.2 On Deck

This is a testing mode, where all controls can be changed and adjusted without transmitting power to the transducer.

5.2.1.3 Bar Check

This mode is implemented for operators wishing to perform a bar check.

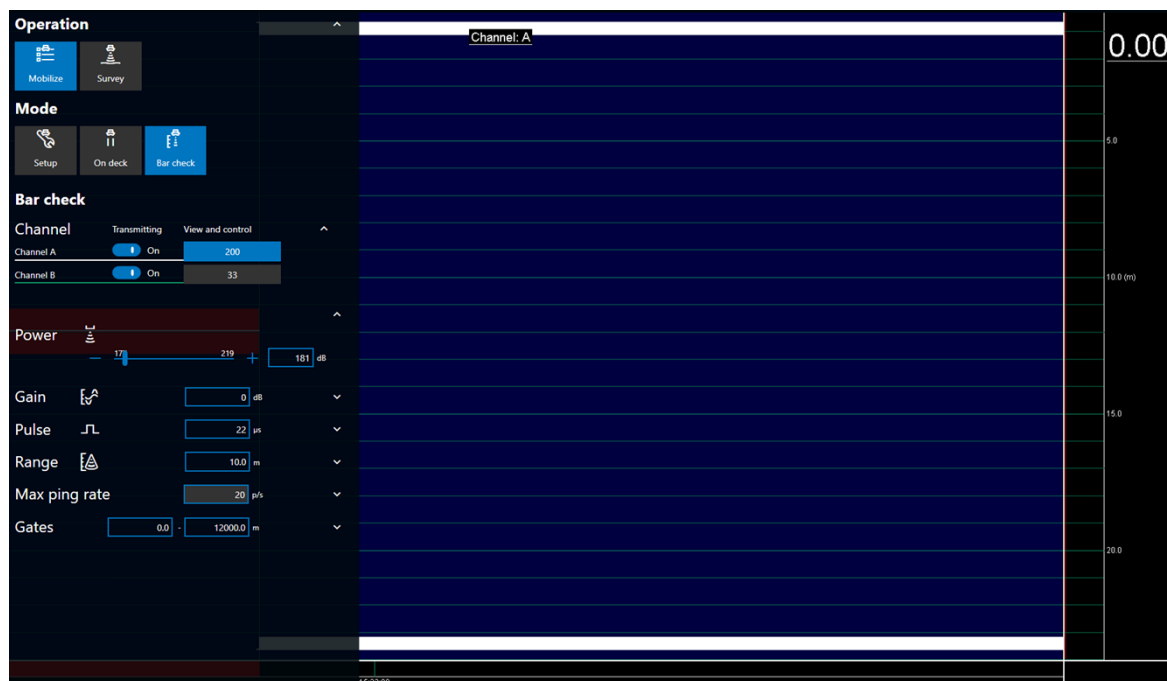


Figure 9: Bar check mode

- All bar check parameters, except ping rate, may be adjusted by the operator.
- For more reliable detections on the bar in the water column, the operator can choose to enable gates by double-clicking the A-scan at the chosen depth. The gate width is set automatically based on depth; the gates are shown in red. Alternatively, they can be manually set in the Operation settings panel. The Gate icon in the SBES UI has to be active (blue) for the gates to be used.
- An annotation is triggered in the SBES UI when double-clicking the echogram while the Marker icon is active (blue).

NOTE

The gates are only visible and interactive when the depth line for the given channel is on. Settings in bar check are copied to manual mode, as long as the system was pinging in manual mode before starting the bar check routine.

5.2.2 Survey Modes


These are the operational modes for normal hydrographic survey acquisition. Choose between automatic, semi-automatic, and manual control of your DESO 5DS.

CAUTION

Do not transmit without a transducer attached to the DESO 5DS or with the transducer in air.

5.2.2.1 Automatic

- All operation parameters are maintained autonomously.
- Except for Max ping rate and Gates, the control sliders are not interactive and show applied values only.

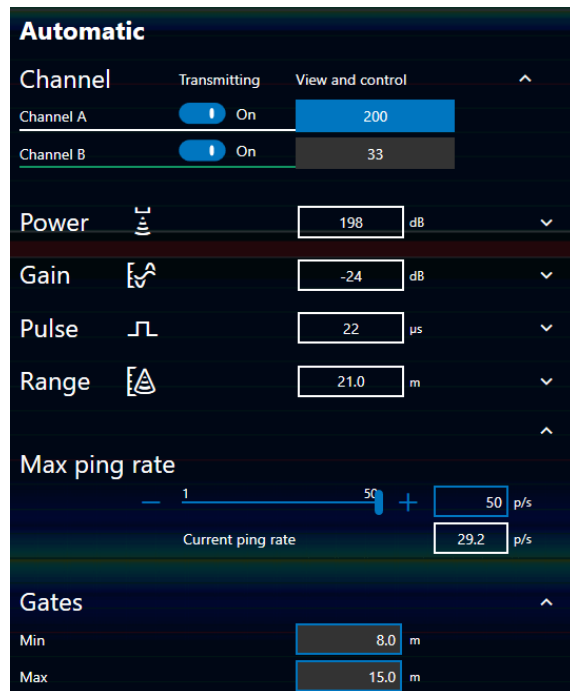

5.2.2.2 Semi Auto

- In Semi auto mode, all operation parameters may be left to the system to maintain.
- When desired, all parameters may be adjusted by the operator.


NOTE

The scale settings are adjusted in predetermined increments, except Max ping rate and Gates, which are set by the operator in all modes.



5.2.2.3 Manual

- In Manual mode, all settings are adjusted by the operator.
- No settings are controlled by the system.

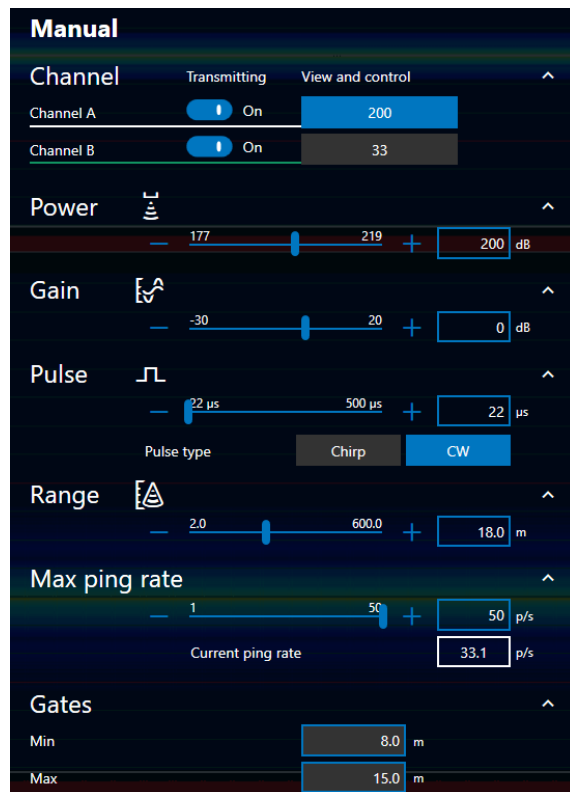

For details on operation, see *section 6.1 Operation Modes*.

NOTE

The TVG is always controlled by the system – even in Manual mode.

5.3 Standalone Operation

The DESO 5DS can operate without a connected user interface, provided it doesn't need to be time synchronized or if time is synchronized via GPS/ZDA.

To enter standalone mode:

- Configure the DESO 5DS, and select the desired operation mode, Manual, Semi auto, or Automatic. For Manual and Semi auto mode, adjust any other relevant settings.
- Exit the UI. The settings are automatically saved before exiting.
- Switch the DESO 5DS off.
- Switch the DESO 5DS on.
- Press the channel A/B button on the front panel to start pinging.
- The DESO 5DS will now resume its operation with the saved settings.

NOTE

The DESO 5DS will never start pinging by itself when powered up. The channels have to be enabled either via the UI or the front panel buttons.

CAUTION

Make sure to switch off the DESO 5DS, when it is not used. It will continue pinging, if you have not explicitly disabled pinging in the UI before closing it.

5.4 SBES UI BITE

The top left of the screen provides feedback from the DESO 5DS to the operator about its current state.

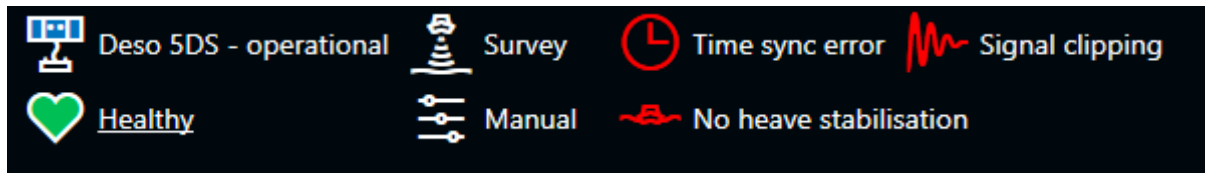


Figure 10: SBES UI BITE

There are a number of built-in alarms/icons to assist the operator troubleshoot the most common problems during operation.

Table 7: BITE icons

BITE icons		Description
	Bottom detect	This alarm shows that the bottom detection is lost. Some settings may have to be adjusted to regain bottom detection. Consider whether the range is too short.
	Heart	The Heart indicates the general health of the DESO 5DS unit. The icon is interactive. Click it to generate a more detailed BITE summary file, which can be shared with support when troubleshooting.
	Heave stabilization	This icon shows that a source is active on the Sensors tab, but no data is received.
	Signal clipping	Clipping has occurred in one or more samples of the water column. Reduce power and/or gain, if in manual mode.
	Temperature warning	Environment is too hot. Increase ventilation or reduce the demand on the DESO 5DS, such as limiting ping rate or reducing source level.
	Time sync status	A time source is active, but no data is received, or the data contains a large time jump. If you are confident there is no error, the time sync can be restarted by toggling the source in the UI.

6 THE DESO 5DS IN ACTION

6.1 Operation Modes

For most applications, the Automatic mode is the optimal choice for the DESO 5DS to deliver the best data, in the widest variety of seafloor conditions, as it constantly adapts to the signal received. Should the operator or hydrographic surveyor desire full control of the sonar, the manual mode provides this facility. The Semi auto mode provides the user with a mode to run with autonomous settings, with the option to tweak the applied sonar parameters to their liking.

- Automatic: This mode is the mode recommended for most operators. This autonomous mode requires no operating input from the user, and adjusts the applied settings based on a continual analysis of the sonar signal.
- Semi auto: This mode is recommended in the cases, when you want to slightly adjust or tweak the automatic settings. Adjustments are indexed settings lower and higher than what the automatic mode is picking.

NOTE

If the DESO 5DS has already chosen the minimum or maximum value of what the transducer supports for a sonar setting, tweaking the setting in Semi auto mode does not reduce (at minimum) or enlarge (at maximum) the applied value further.

- Manual: This mode gives the user full control of the DESO 5DS and is recommended for:
 - The experienced operator.
 - Use in an area that the operator knows well.
 - The operator who wants static settings in order to avoid ever changing settings that adjust to a changing environment.

6.2 Marking

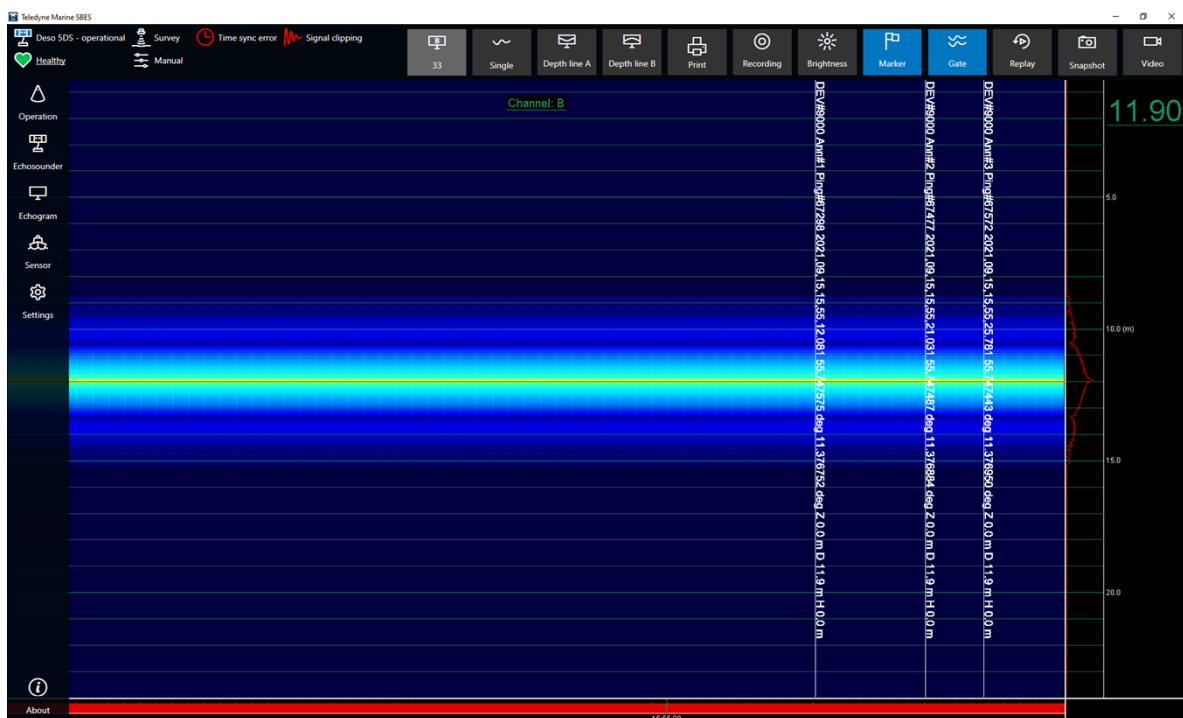


Figure 11: Echogram window with three marker annotations

When the Marker icon is active in the UI, the operator can double-click to add an annotation for the active channel. Click the Marker icon again to hide these markings.

External annotations of the echogram can be triggered via s7k protocol. For details, refer to the Data Format Definition document (see *Appendix A – Reference Documentation*).

6.3 Gates

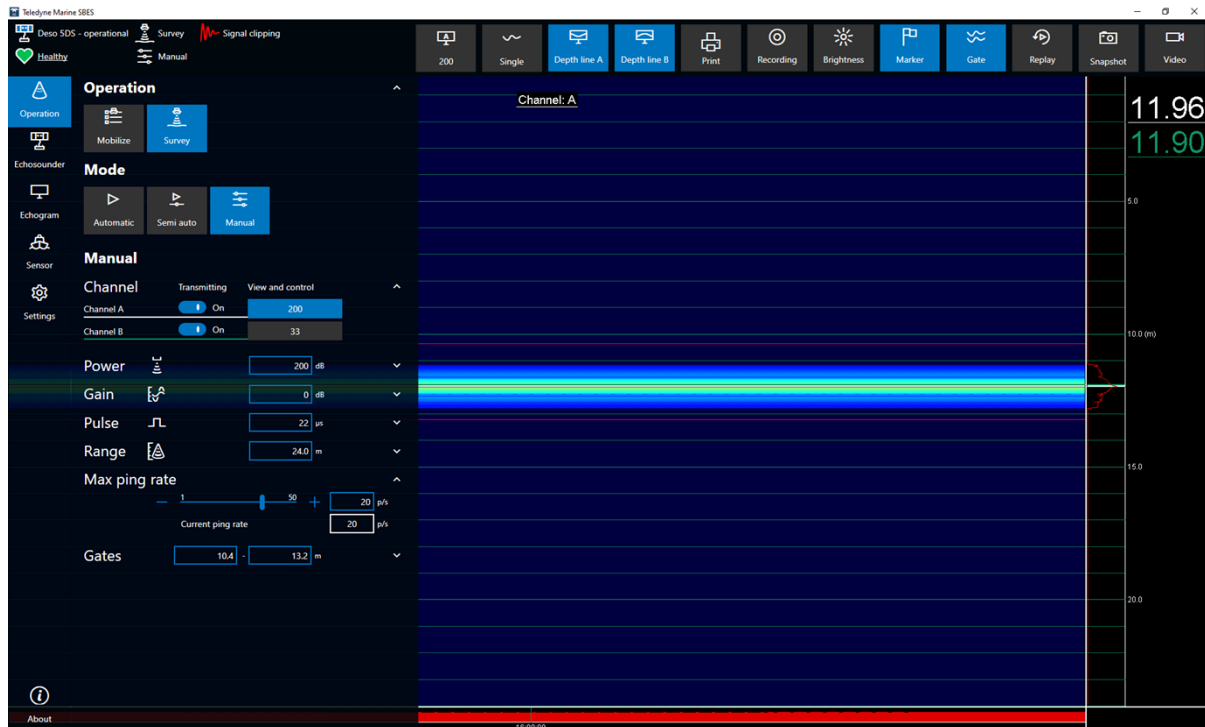


Figure 12: A-scan window with gates

- Manual gates can be used in bar check and all operational modes. They are set per channel using an entry in the Operation tab or quickly set to a percentage of depth when you double-click the A-scan.
- Depths are only valid or accepted inside the gate limit, so it is important to update the gates regularly or set them for a range your survey area won't exceed.
- The gates can only be set, if both a depth line and the Gate icon are active. Disabling the gates is quickly achieved by making the Gate icon inactive.

6.4 High-Frequency Gating

Users echosounding over soft sediment with a dual-frequency transducer may notice that the LF channel penetrates further in the sediment than the HF channel. For some applications it is desirable to measure both the (soft) upper seabed and the (harder) sub-bottom. The High-Frequency Gating option (HFG) improves the consistency of LF sub-bottom detections.

In this mode, the HF detections act as a gate for the LF channel. In practice, this means that the soft upper layer is detected by the HF channel and ignored by the LF channel, which instead detects the next strongest return. When HFG is used in combination with gates, the upper gate limit is set by the HF detection. The data output remains the same whether HFG is enabled or not. HFG is enabled/disabled from a button in the top ribbon.

 


Figure 13: SBES UI with High-Frequency Gating enabled

6.5 Print

 

The printing controls are managed from the SBES UI Settings tab.

- Select your printer from the list of devices or drivers you have connected to the computer running the SBES UI.
- If you wish to create a PDF file for later printing, toggle the PDF option.

NOTE

Some PCs have a printer driver named 'print to pdf' or similar, but this is not advised; if the system is pinging quickly, you may find the Save dialog popping up too frequently as each page is generated. The embedded PDF option should be used to create a multiple page PDF file instead.

- Your echogram or PDF file will use the same display colors as the SBES UI, but can be forced to use black and white by using the option here.
- Once configured, printing can be started by clicking the Print icon at the top of the screen. When active, the icon will be blue.

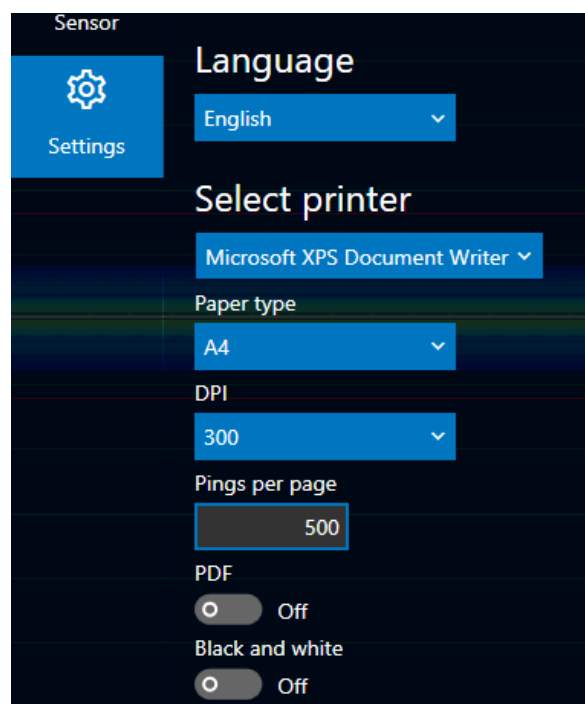

6.6 Interference Considerations

Physical limitations in the functionality of the system must be taken into consideration when installing and operating echosounders, including the DESO 5DS. Some of the limitations are absolutes; others can be overcome to some degree. The following subsections provide examples of different kinds of limitations.

6.6.1 Cavitation

Some reduction in the transmitted source level is expected to be caused by cavitation.

Propeller Cavitation

Propeller cavitation can be a significant concern for two reasons. First, the frequency of propeller cavitation noise is in the operating frequency band of most echosounder equipment. Second, the source levels of the propellers installed are expected to be high unless special quieting techniques have been implemented.

Propeller energy typically propagates to the forward area of the echosounder equipment via a direct or hull-grazing path. The other arrival path of propeller energy is by the bottom bounce path. This path will be more significant in shallow water depths (less than 500 meters). The potential impact can be further quantified for particular bottom depths of proposed operational test sites.

Appendage Cavitation

Appendage cavitation can result from rough or unfaired edges on the hull and can even be present at lower speeds. If the source is located near the acoustic sensor installation area, it can be a significant noise deficiency. It is difficult to predict the occurrence of appendage cavitation without under-hull drawings, pictures, or visual inspection of the ship when in dry-dock.

6.6.2 Machinery Noise

Machinery noise should not be a major factor for acoustic sensors that operate at frequencies above 5kHz. Mechanical machinery noise is usually prevalent at 2kHz and below, though it is occasionally detected at higher frequencies when fluid flow through pipes or cavitating pumps are involved.

Typically, the most important consideration for machinery noise is the proximity of the acoustic sensor to the machinery source. There has been one observed case where diesel engine piston frequency harmonics have been the controlling noise source at 12kHz, but in this situation, the engine room and the acoustic sensor compartment shared a common bulkhead. Normally, acoustic devices are sufficiently distanced from major machinery noise sources that machinery noise does not interfere.

A concern remains that there may be some auxiliary machinery (or other unusual equipment) located near the acoustic sensor that could produce noise interference. An inspection of the installation site and ship drawings to verify the position and proximity of all shipboard equipment should be conducted to determine if there is a potential for machinery interference prior to conducting at-sea testing.

6.6.3 Electrical Noise

Due to measures in the electrical design of the echosounder, it is very robust and insensitive to electrical noise. However, in the event of noise, please consider the following basic advice:

- Avoid low budget DC to AC power converters and power generators.
- If necessary, use stabilized UPS as a power buffer for AC supply, or use a straightforward DC supply via a dedicated battery pack.

6.6.4 Interference from Other Echosounder Systems

Interference from other echosounder systems can be seen as radial lines, typically moving away the minimum to maximum range scale as these pings are not correlated with the ping repetition rate of the DESO 5DS system. The most typical source of interference of this type is navigational sonars (often 50kHz systems) and Doppler velocity logs.

Synchronization of acoustic systems is one means to mitigate this effect. The most effective approach is to remove the source of interference entirely, by either moving the equipment away from the acoustic sensor of the DESO 5DS or turning it off.

6.6.5 Speed

Hydrodynamic flow noise can be a concern when operating at higher speeds. Externally mounted acoustic sensors should have fairings that are mounted as flush (or near flush) to the ship hull as is practically possible. This way the hydrodynamic flow-induced vibration noise should be minimal.

NOTE

A poorly designed sonar fairing can degrade the system performance by a factor of 4 for speeds above 8-10 knots. This noise source is a common problem on all echosounder installations.

6.6.6 Air Bubbles

Bubble sweep-down can be another potential noise problem. The significance of this problem is associated with the noise generated as the bubbles cascade along the hull after being ingested in the bow wave of the ship and, more importantly, with the baffling produced by the entrained air layer between the face of the acoustic sensor and the water environment.

If air bubbles are present between the acoustic sensor and the water, the system will not function properly. This phenomenon is transient in nature occurring only for a few seconds per wave period. It is typically most prevalent on shallow draft ships and increases in intensity at higher sea states and ship speeds.

Modeling of this problem only indicates that air bubble noise may be present by determining the transmission vehicle of potential bubbles. Actual at-sea measurements are usually required to fully determine the presence and severity of bubble sweep-down. At-sea diver viewing has been very successful in the past to capture the bubble sweep-down characteristics of a particular ship hull on film.

Air bubbles mask some or all of the view of the acoustic sensor where the affected area will completely blank out. Common causes for bubble masking include:

- The vessel props when thrusting into reverse and pours a stream of bubbles over the acoustic sensor.
- The acoustic sensor has not been deployed deeply enough and there is bubble wash from the sea surface.
- Bubble ingestion as the vessel pitches into the sea.

6.6.7 Environment

A high-reverberation environment where echoes of the previous ping are contaminating the current ping may prove to be difficult to overcome.

7 TROUBLESHOOTING

7.1 The DESO 5DS does not seem to be working

If the DESO 5DS does not seem to be working correctly, perform these steps to find the cause.

- (a) Check if the power LED is on.
- (b) The DESO 5DS has a Standby bit that is turned on by default. Try to communicate with the DESO 5DS via the SBES UI.
- (c) Check that all the cables are properly connected and intact. If cables are not properly secured, electrical signals may not be transmitted or received.
- (d) A blinking TX LED means that the digitizer is firing, but the data may not be sent out on the COM port of the DESO 5DS. The DESO 5DS could be in Standby mode.
- (e) Make sure the DESO 5DS is not in Standby mode.
- (f) Make sure you are using the correct COM port. Windows will display an error message if the port cannot be used or if it is already open/used by another program.
These programs or devices use COM ports: Modem, Mouse, Scanners, and Printers.
- (g) Try toggling the COM port off and on with the Windows application software you are using.
- (h) Try powering down the DESO 5DS and powering it back up again. If the DESO 5DS is turned on before the computer, it may interfere with initializing and setting up communication channels.

7.2 The DESO 5DS power LED is off

Try powering the DESO 5DS down and back up again.

If this does not resolve the problem, contact reson-support@teledyne.com for assistance.

7.3 What are the COM port settings?


The DESO 5DS uses the following default settings for the COM ports:

- 115200 baud, 8 data bits, no parity, 1 stop bit.

The COM port used to interface with the DESO 5DS can be selected on the Sensor tab in the SBES UI.

7.4 Known problems with Transducer

Always make sure that the transducer face has been cleaned with mild soap to improve the interface between the transducer and the water. Sometimes a thin layer of air can be trapped on the face of the transducer. This will result in poor or no signal return from the transducer.

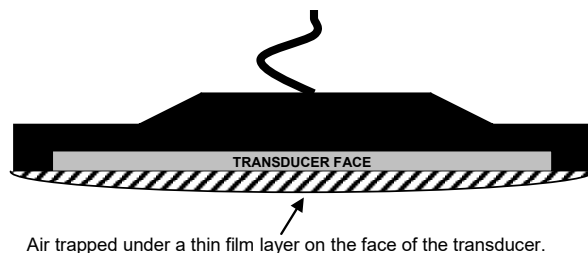

8 HANDLING AND MAINTENANCE

8.1 DESO 5DS

8.1.1 Handling

- Use original shipping boxes when shipping or storing the unit.
- It is important to ensure that the echosounder is not dropped or suffers any shock damage.

CAUTION

Avoid impact damage to the unit, as this may damage the internal components.

8.1.2 Maintenance

- Inspect the echosounder for any signs of damage at regular intervals.
- Keep the DESO 5DS echosounder clean and dry.

8.1.3 Dust Filter

The echosounder is equipped with filters to prevent dust and other particles to enter the unit. The dust filters need to be changed **at least** once a year:

- Unscrew the six screws holding the front cover plate.
- Lift off the front cover plate.
- Replace the two dust filters.
- Reassemble the echosounder.

OR

- Remove the dust filters and clean them with a mild, nonabrasive soap in lukewarm water.
- Put the dust filters back in their place in the echosounder.

CAUTION

Make sure that the filters are completely dry before placing them in the echosounder.

- Reassemble the echosounder.

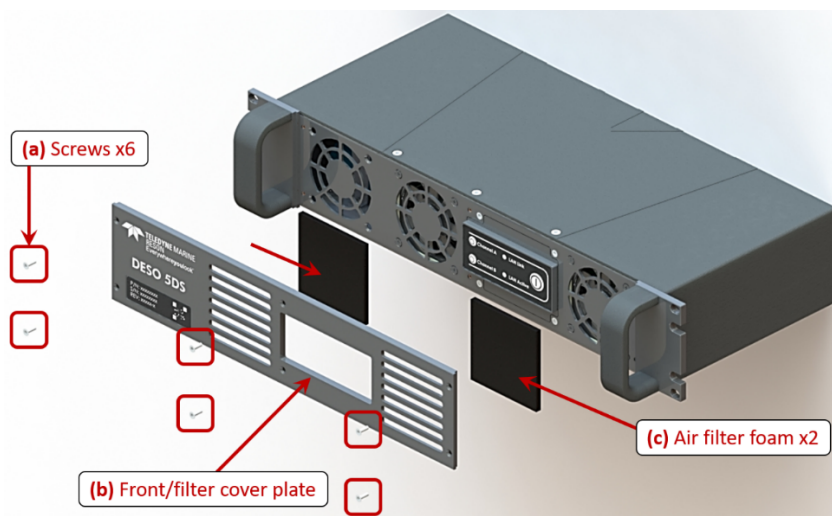



Figure 14: Echosounder dust filter location

8.1.4 System Tool –Software Update

The System Tool allows you to manage the DESO 5DS echosounder. The tool is provided on the USB key delivered with your system.

Install System Tool

- Plug in the USB and navigate to the Windows folder where the System Tool executable is stored (on the supplied USB or on your laptop/PC).
- Double-click the SBES-SystemTool-XXX.exe file.

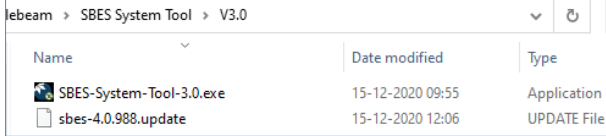


Name	Date modified	Type
SBES-System-Tool-3.0.exe	15-12-2020 09:55	Application
sbes-4.0.988.update	15-12-2020 12:06	UPDATE File

Connect to the DESO 5DS

- Enter the Device IP/Host address or click the drop-down menu to display a list of available DESO 5DS systems on the network.
- If in doubt: The Host name is the serial number located on the front of the DESO 5DS. The Host name can be used to distinguish the units from each other on a network with multiple DESO 5DS systems.

When an IP is entered or selected, the tool automatically tries to establish a link with the DESO 5DS.

The Status window will provide feedback on whether the tool is successfully connected or not.

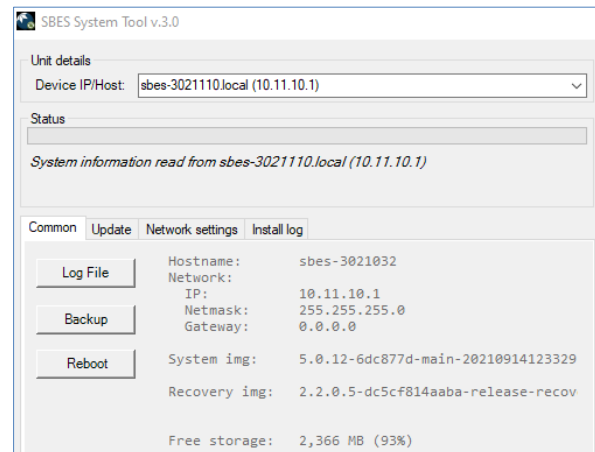

NOTE

The Common tab contains options for downloading log files, making backups of the system image, and a method to trigger a soft reboot of the device.


Update Singlebeam Software

- (a) Click the Update tab (1).
- (b) Click the ellipsis (...) button (2) and navigate to the appropriate Windows folder to select the UPDATE file.
Or drag and drop the UPDATE file onto the application.
- (c) For a standard update, select Keep custom settings (default).
- (d) The checkbox Download backup before update is selected by default. If a backup is not required, deselect this option.
- (e) Click Update (3).

The system will reboot and start the update with progress details displayed in the status window.


Update mode is indicated by a steady purple light on the DESO 5DS power button, and the channel buttons will flash in purple as the update is written to the DESO 5DS.

- (f) Once the update is complete, switch to the Common tab:
 - (i) To rescan the DESO 5DS and verify that the update has been applied.
 - (ii) To read the Log File.

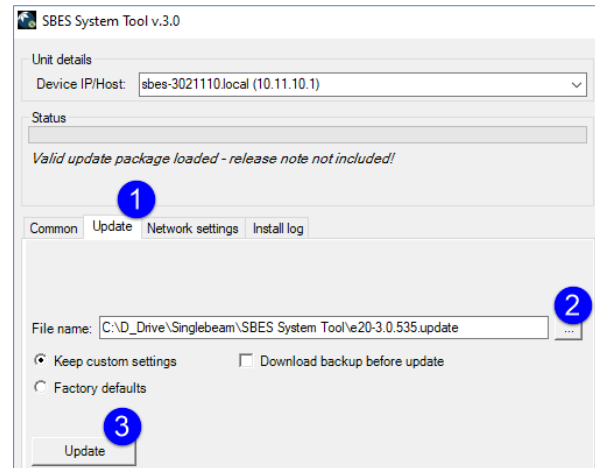


Modify Network Settings

- (a) Click the Network settings tab.
- (b) Select the desired options:
 - DHCP
 - Static IP
- (c) Click Apply.
- (d) The DESO 5DS is automatically rebooted for the settings to take effect.

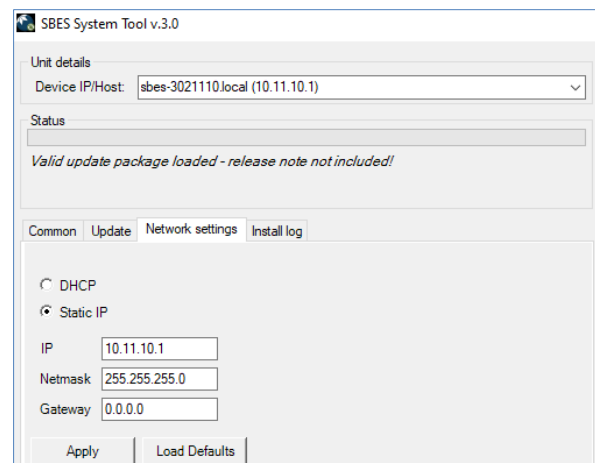

Install Log

- Click the Install log tab to display the list of applied updates over time.

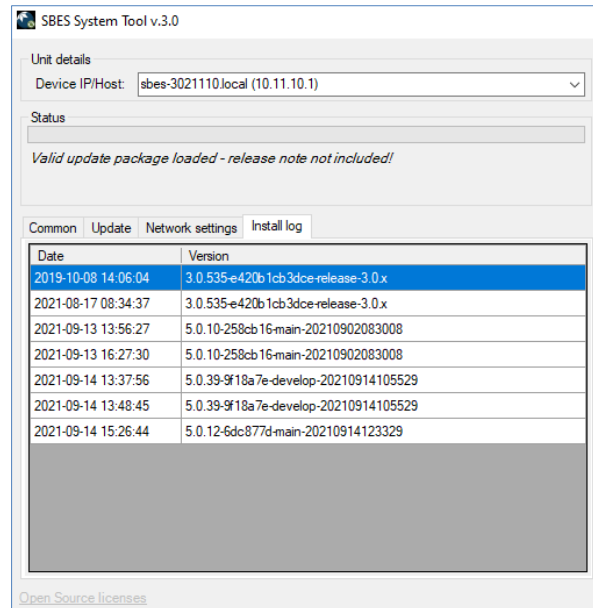

8.1.5 Recovery

Recovery mode is for trained engineering service personnel. It is a safe mode that allows access to the DESO 5DS on a secondary recovery IP address. The main user settings are still active.

- You can force the DESO 5DS echosounder into Recovery mode by pressing the Channel A and B buttons simultaneously at power up.
- The Recovery mode will not allow any echosounder operations and the SBES UI will not be able to see the unit.
- In this mode it is possible to use the System Tool via the default IP address 10.11.10.1.
- With the Recovery mode you always have access to a safe working state, which is useful in e.g. the following circumstances:
 - There is a loss of power during a Singlebeam Software update.
 - If you have accidentally misconfigured the network settings and cannot get in contact with the unit.


NOTE

When resuming normal operation by power cycling the unit, the setup of the SBES is the same as before (unless modified during the recovery mode session).



8.1.6 Updating Transducer Models

This feature allows the user to add new transducer models to the DESO 5DS (when connected to the DESO 5DS).


- (a) Click the Settings tab.
- (b) Under Update transducer model list, click the Choose file button and select the file that was issued by Teledyne Support.

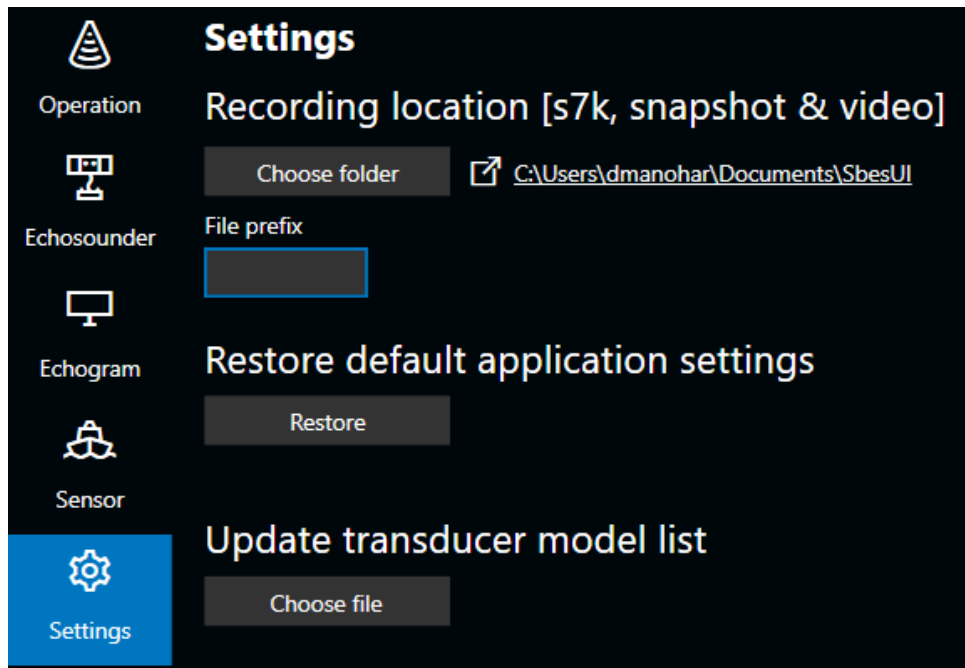



- (c) Click Continue, and then Restart to add the new model(s).

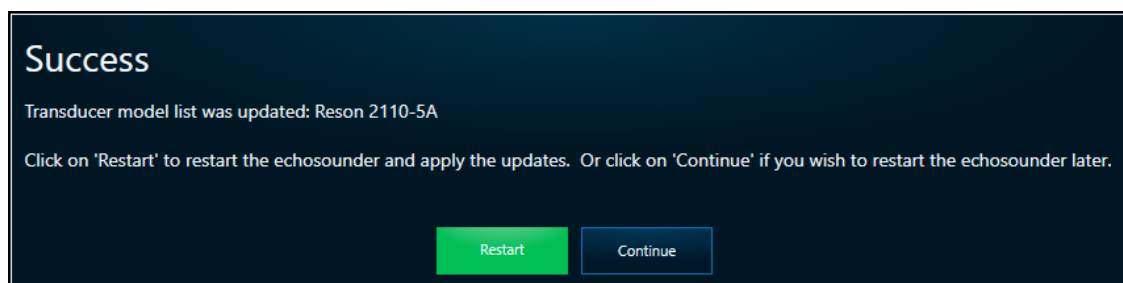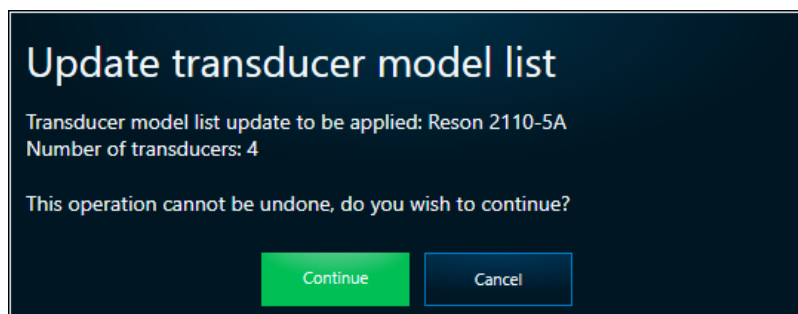

- (d) The added transducer model(s) can be found by:
- (i) Clicking the About button to the bottom left of the screen.

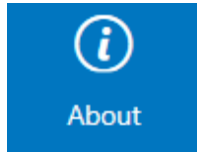

- (ii) Clicking the Applied updates button to the bottom right.

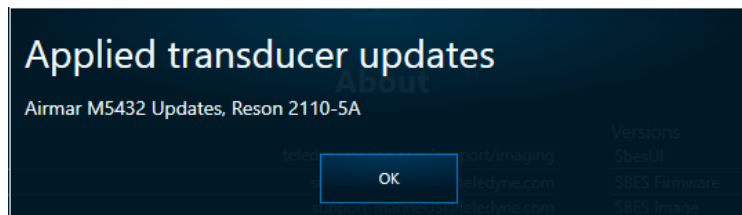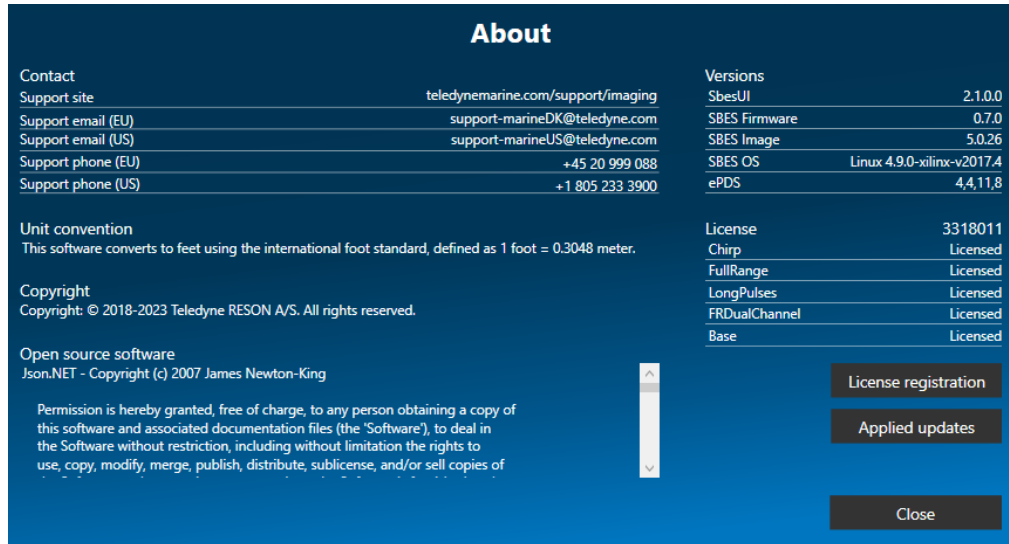

CAUTION

If a model does not exist for the transducer, use the generic “unknown” transducer model. Using an incorrect model not only degrades the performance, but can also cause damage to the DESO 5DS or transducer.

8.2 Transducer⁶

8.2.1 Handling

- Use original shipping boxes when shipping or storing the unit.
- It is important to ensure that the transducer is not dropped or suffers any shock damage.

CAUTION

Avoid impact damage to the unit, as this may damage the internal components.

⁶ Please, refer to the manufacturer's instructions, as well.

8.2.2 Maintenance

- Keep the transducer clean and free from marine growth where possible.
- Inspect and clean the transducer at regular intervals, especially if it is to be immersed in water for long periods of time.
 - A non-abrasive cleaning product should be used to clean the unit.
 - Ensure that the transducer is not scratched in any way.
- Store the transducer in a dry environment.

CAUTION

Be careful not to scratch the transducer. Ensure it is placed on a clean surface free from items that may damage it.

8.3 Power/Data Cable

8.3.1 Handling

Take care not to bend the cables beyond the recommended minimum bend radius.

- **AC power cable:**
 - Fixed installation: 42mm
 - Occasional flexing: 125mm
- **Data cables (transducers, COM):**
 - Fixed installation: 5 x outer diameter
 - Occasional flexing: 15 x outer diameter

CAUTION

Do not lift the equipment by the cables.

8.3.2 Maintenance

Regularly inspect the cables and connectors for wear, and clean regularly with a non-corrosive cleaning agent.

Dry end:

- Inspect the connectors at regular intervals.
- Lubricate the connectors lightly with 3M lubricating spray or equivalent when necessary.

CAUTION

Avoid using WD-40 and similar that could degrade connectors and cables.

- Grip main body of connector during mating or unmating. Do not pull on cable to disconnect.
- Avoid sharp bends at cable entry to connector.

APPENDIX A – REFERENCE DOCUMENTATION

A.1 DESO 5DS Documentation

In addition to this document, the following documentation is available in Adobe Portable Document Format (.pdf) for printing.

Document Title	Document Number	Description
DESO 5DS Operator's Manual	OM21910	Version 6 or higher
DESO 5DS Quick Reference Guide	QG21911	Version 1 or higher
SBES User Interface Quick Start Guide	QG19897	Version 1 or higher
Data Format Definition Document ⁷	DFD20723	Version 3.12 or higher

A.2 DESO 5DS Design Documents

The following design documents and drawings are provided for reference purposes.

Document Title	Document Number
DESO 5DS, Outline	22022
Cable Assy, Converter transducer cable, 7/8 5 pole male to mill spec 5 pole female (PT01J-14-5S) (optional component)	19369 (PN 1013713-DK)
Cable Assy, Extender transducer cable, 7/8 5 pole male to 7/8 5 pole female (optional component)	19359 (PN 1013700-DK)

⁷ Also available here: <https://github.com/Teledyne-Marine/7k>

A.2.1 DESO 5DS Outline

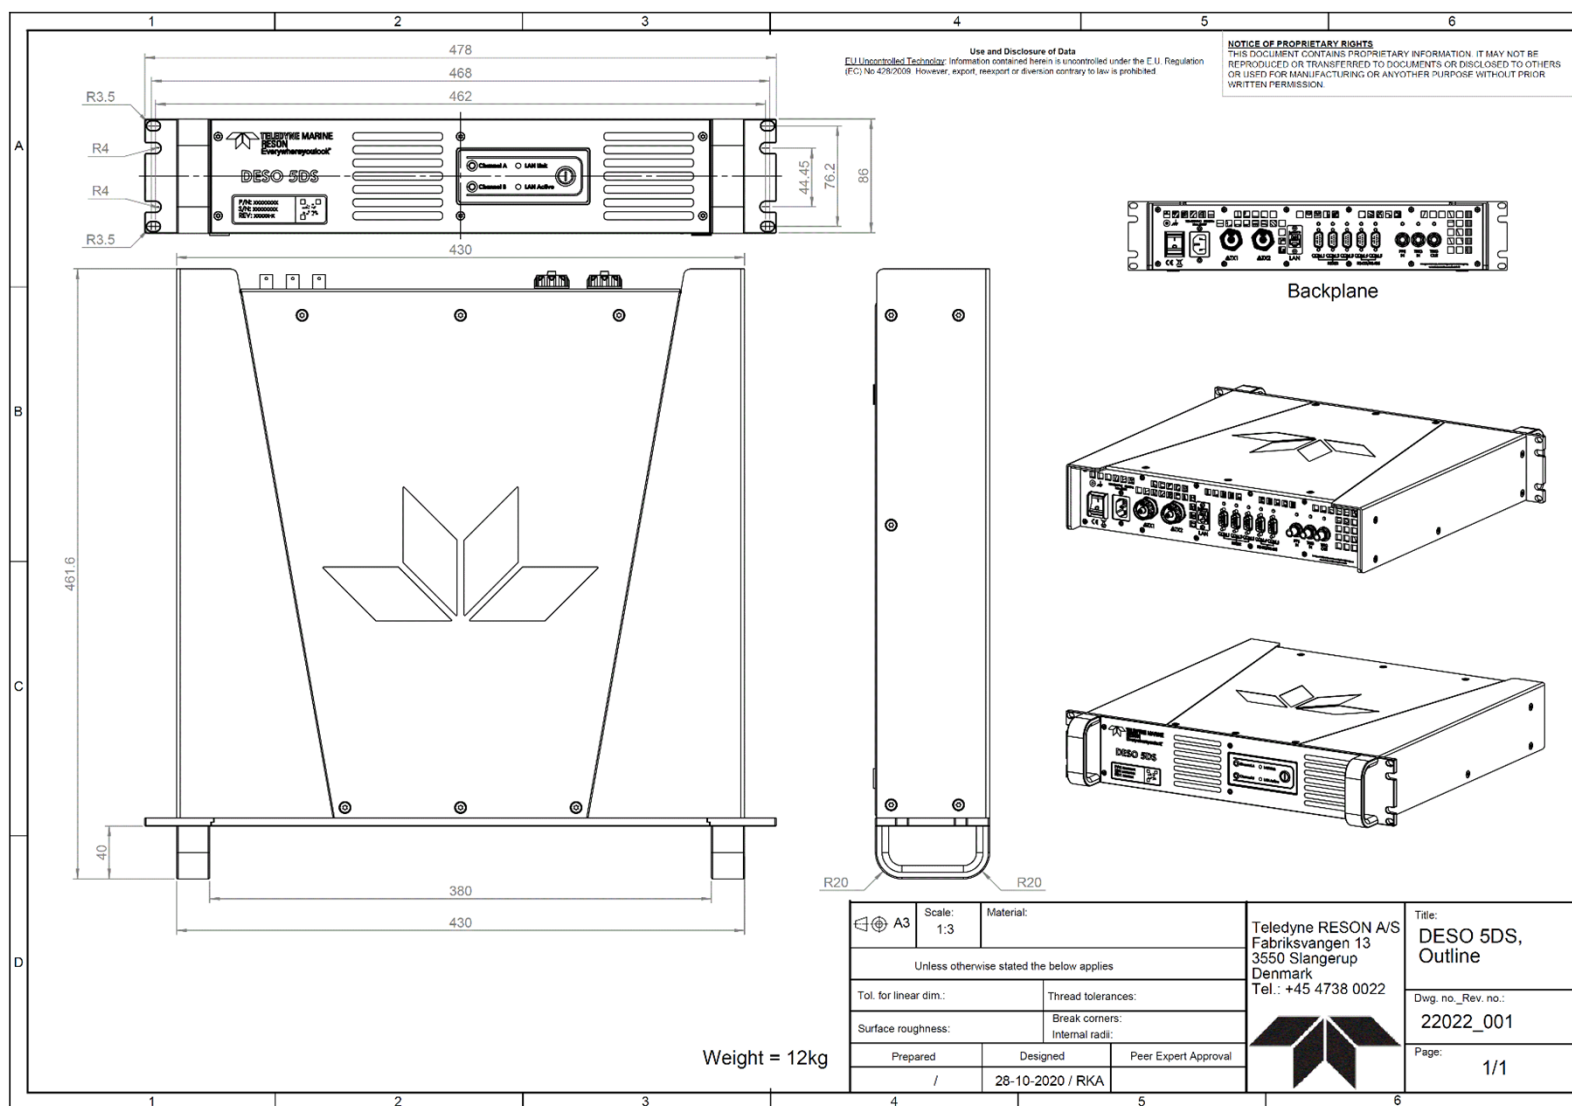


Figure 15: DESO 5DS outline

A.2.2 Converter Transducer Cable (optional component, PN 1013713-DK)

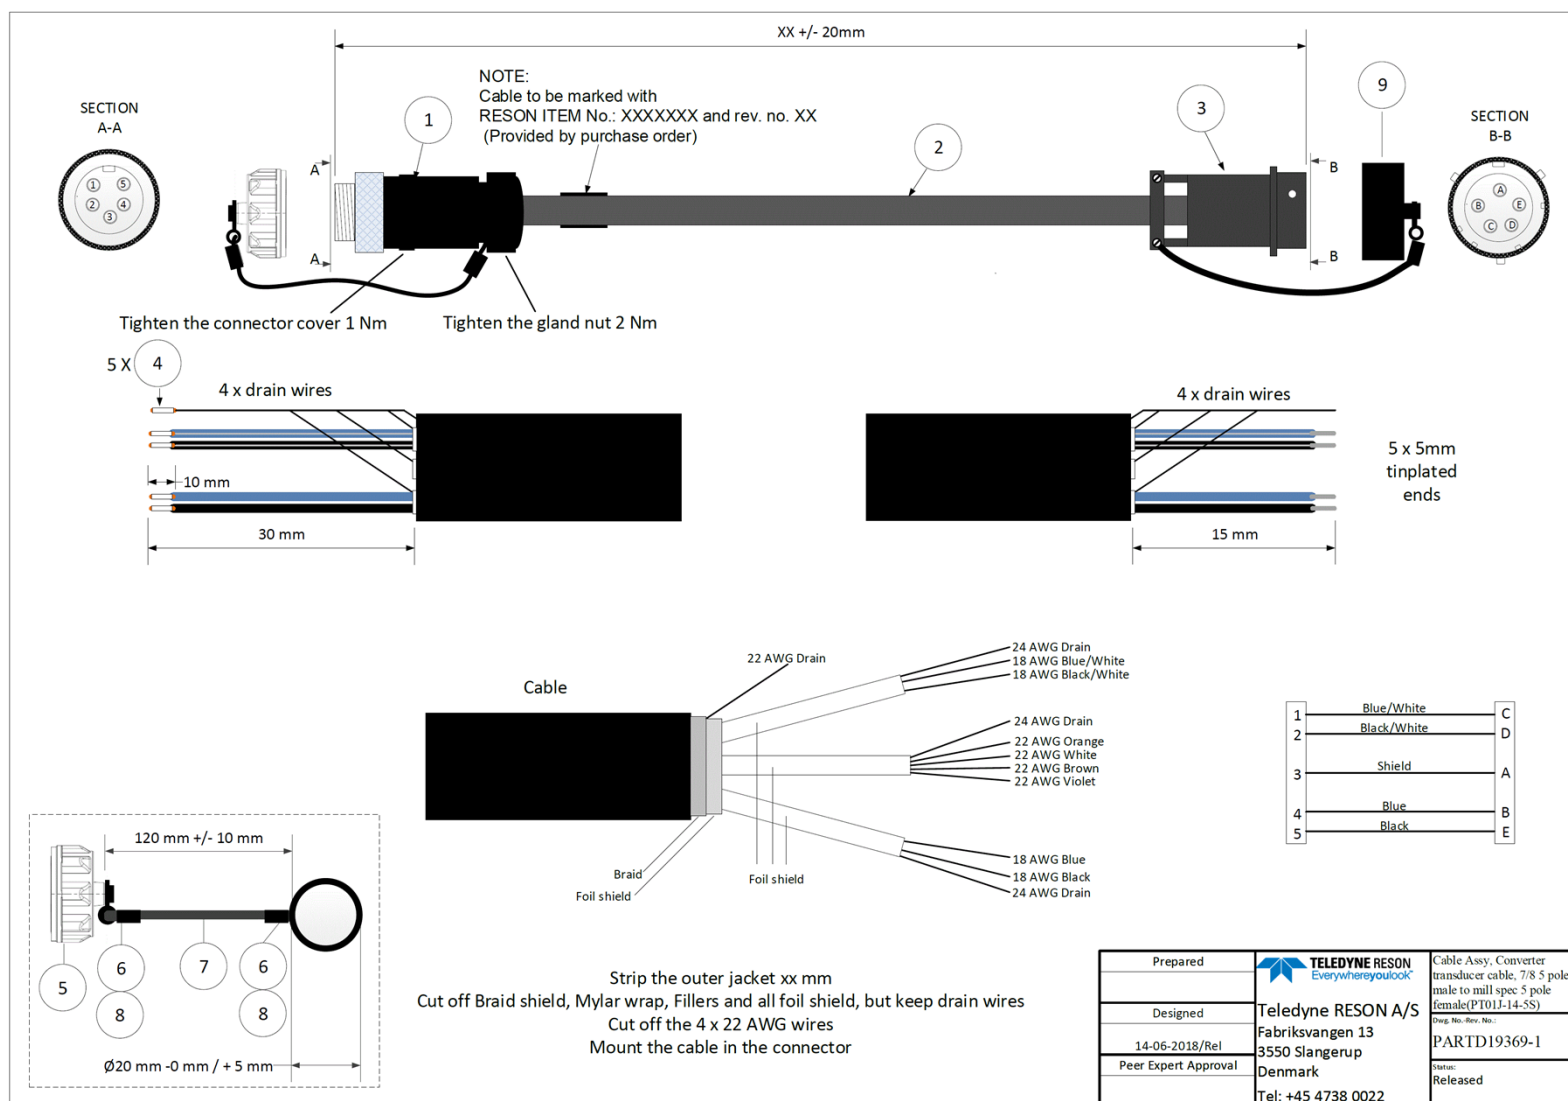


Figure 16: Converter transducer cable (optional component, PN 1013713-DK)

A.2.3 Extender Transducer Cable (optional component, PN 1013700-DK)

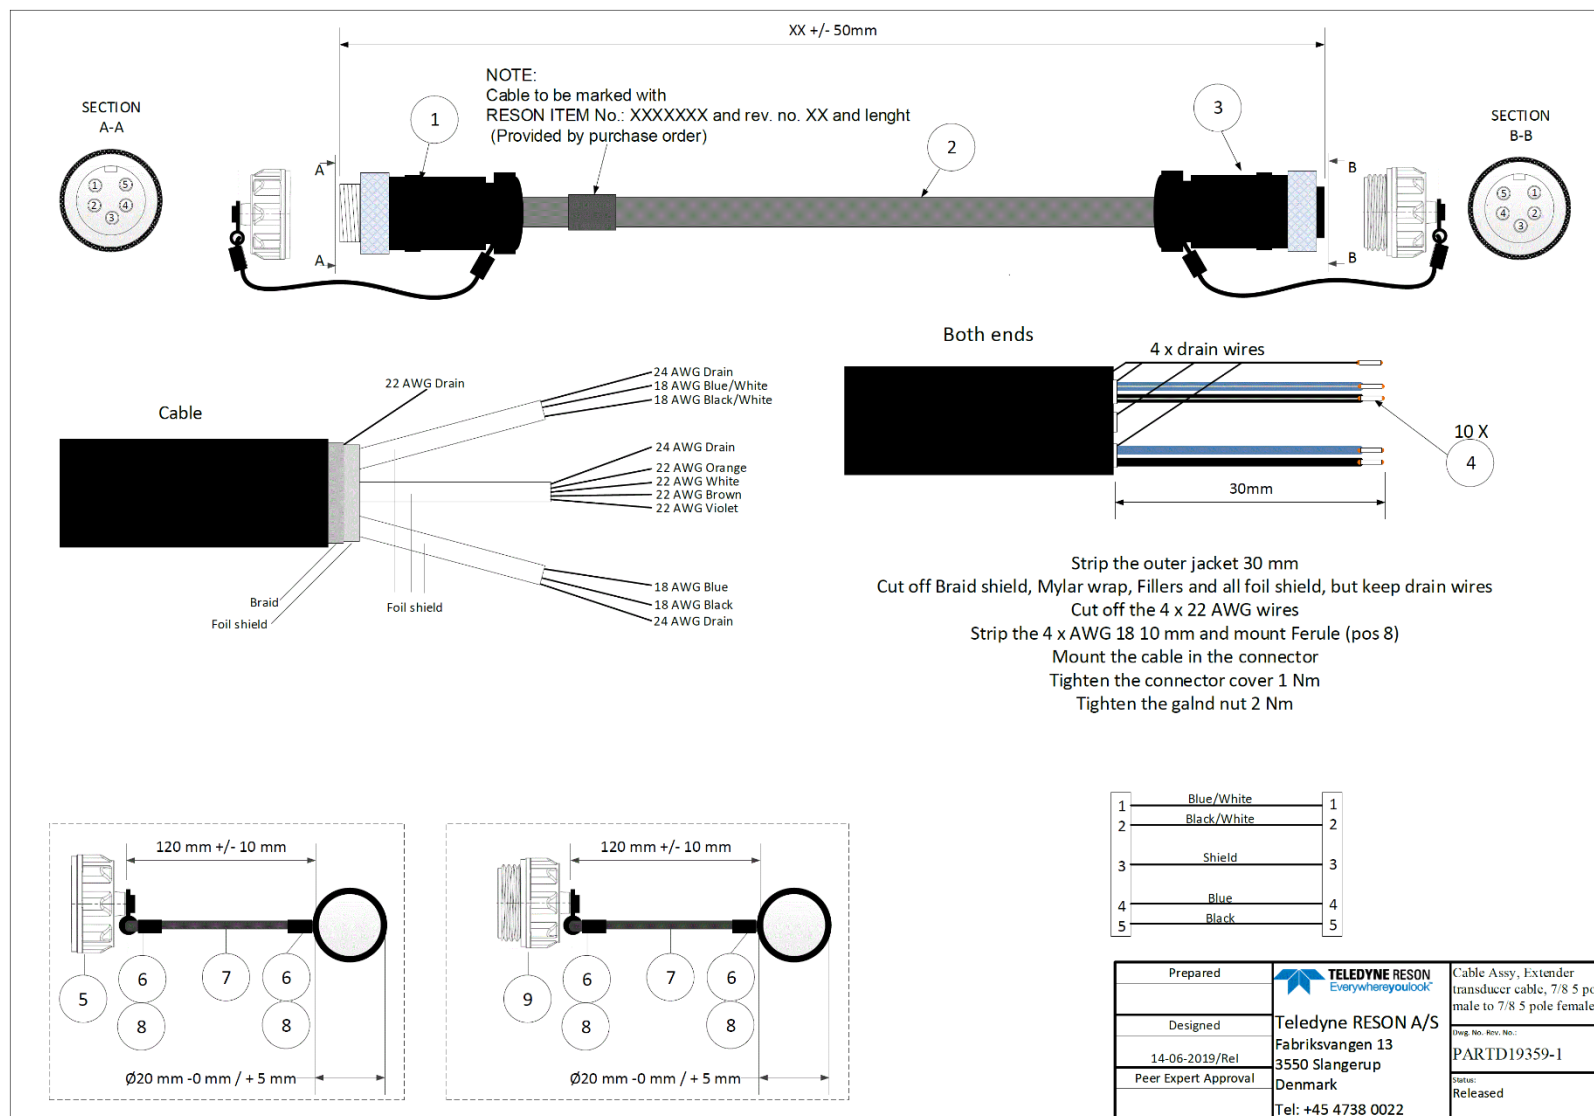


Figure 17: Extender transducer cable (optional component, PN 1013700-DK)

A.3 Licenses – Copyright Information

Table 8: WPFDXInterop – Copyright Information

WPFDXInterop – Copyright (c) 2015 Microsoft

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

Table 9: DirectXTK – Copyright Information

DirectXTK – Copyright (c) 2017 Microsoft Corp

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

Table 10: Json.NET – Copyright Information

Json.NET – Copyright (c) 2007 James Newton-King

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

Table 11: mvvmlight – Copyright Information

mvvmlight – Copyright (c) 2009 – 2016 Laurent Bugnion (GalaSoft), laurent@galasoft.ch

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

Table 12: SharpAvi – Copyright Information

SharpAvi- Copyright (c) 2013–2018 Vasili Maslov

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

Table 13: Math.NET – Copyright Information

Copyright (c) 2002–2018 Math.NET

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:


The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

APPENDIX B – CABLE CONNECTORS

NOTE

All connector views are the faces of the cable connectors on the rear panel of the DESO 5DS.

B.1 TX1 and TX2 (male connectors)

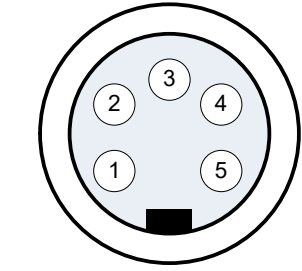	Pin	Signal
	1	Ch B+ (low freq.)
	2	Ch B- (low freq.)
	3	Shield
	4	Ch A+ (high freq.)
	5	Ch A- (high freq.)

Note: Connectors TX1 and TX2 are connected in parallel.
Connect only 1 transducer for each pair.


B.2 COM1-3 Ports (DB9 RS232 male connectors)

Pin	Signal
2	RxData (up)
3	TxData (down)
5	Ground

B.3 COM4-5 Ports (DB9 RS422/485 male connectors)

Pin	Signal
1	TxData-
2	TxData+
3	RxData+
4	RxData-
5	Ground

B.4 LAN

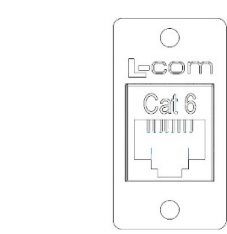	Pin	Signal
	LAN	

APPENDIX C – SERIAL AND UDP OUTPUT STRING FORMATS

C.1 Echotrac DBX (for Universal message)

- The DBX is an ODOM-defined format that is like NMEA formats but not an NMEA compliant format. Checksum is not included, and “DBX” is not registered by NMEA.
- The representation [+]ddd.ddd (or [+]hh.hh) is a fixed point representation of a number.
- The number of digits (d’s, h’s, or other letter) before and after the decimal point are fixed. There may be leading zeros but not leading spaces.
- A + designates that a sign is present. In that case it will display as – or +. Fields not prefixed with + will have no sign.
- DBX is sent per ping. If a channel (A or B) does not have detections for that ping or is not enabled/pinging, its corresponding data fields in the message will be populated with zeroes.

Table 14: Echotrac DBX

Field	Name	Format	Description
1	Prefix	string	\$DBX
2	Date time UTC	YYYY-MM-DD Thhmmss.sss	UTC time, current time (ISO8601-2:2019) <u>Notes:</u> Even if the UI is showing other time zones on its display, it is the UTC that is synced to the SBES and the UTC that is contained in this message. Although ISO8601 defines a range of formats, the only format available in the DBX string is the one given here.
3	Time status	t	0 = UI PC, 2 = GPS with PPS, 3 = NTP server, 9 = not synchronizing at the moment
4	Depth channel A	dddd.ddd	Depth below transducer (channel A)
5	Intensity A	+iii.ii	Intensity in dB at measured depth (channel A)
6	Draft A	+rr.rrr	Draft of transducer (channel A), always applied
7	Depth channel B	dddd.ddd	Depth below transducer (channel B)
8	Intensity B	+iii.ii	Intensity in dB at measured depth (channel B)
9	Draft B	+rr.rrr	Draft of transducer (channel B), always applied
10	Unit	u	Unit for all distance fields in the record: 1 = Meter, 2 = Feet <u>Note:</u> This field defines the unit for the fields 4, 6, 7, 9, 11, 13.
11	Heave value	+hhh.hhh	Measured heave value <u>Note:</u> If a heave sensor is not connected, measured heave is reported as zero.
12	Heave status	c	Heave correction: 0=off; 1=on <u>Note:</u> When heave correction is on, heave is already applied to the depth fields.
13	Sound velocity	ssss.ss	Applied sound velocity
14	End of frame	<CR><LF>	Carriage return and line feed

Full string format:

\$DBX, YYYY-MM-DDThhmmss.sss, t, dddd.ddd, +iii.ii, rr.rrr, dddd.ddd, +iii.ii, rr.rrr, u, +hhh.hhh, c, ssss.ss<CR><LF>

Example:

\$DBX, 2019-09-30T205959.999, 2, 00123.999, -216.14, 00.950, 00124.321, -218.14, 01.100, 1, -002.230, 1, 1435.98<CR><LF>

Example means:

30 Mar 2019 at 20:59:59.999 PPS synchronized, depth of 123.999m corrected for heave for channel A at -216.14dB and 0.950m draft, depth of 124.321m corrected for heave for channel B at -218.14dB and 1.100m draft, -2.230m heave, sound velocity 1435.98m/s

C.2 Echotrac SBT, Single Bottom Tracking (for depth)

Table 15: Echotrac SBT with One Frequency Active (high or low)

Character #	Character	Description
1	<sp>, F	Normally a space, "F" = Fix mark
2-3	et, ET	Unit indicator: "et" = centimeters, "ET" = tenths of feet
4	<sp>, E	Normally a space, "E" = error
5	<sp>	Always a space
6	D	Depth data (MSD)
7	D	Depth data
8	D	Depth data
9	D	Depth data
10	D	Depth data (LSD)
11	CR	Carriage return

Example: <sp>et<sp><sp>DDDDD<CR>
 = <sp>et<sp><sp>02035<CR>
 = 02035cm

NOTE

For both single- and dual-frequency operation, the SBT string is generated until another string is selected on the Sensor tab (see [section 4.4.2 Auxiliary Sensors](#)). If the system is operating in dual frequency with SBT selected, the high-frequency depth is generated.

C.3 Echotrac DBT, Dual Bottom Tracking (for depth)

Using a single frequency

Table 16: Echotrac DBT with One Frequency Active (high or low)

Character #	Character	Description
1	<sp>	Always a space
2-3	et, ET	Unit indicator: "et" = centimeters, "ET" = tenths of feet
4	<sp>, E, O	Normally a space, "E" = high frequency error, "O" = low frequency error (missed return)
5	H, L	Frequency indicator: "H" = high, "L" = low
6	<sp>	Always a space
7	D	Depth data (MSD)
8	D	Depth data
9	D	Depth data
10	D	Depth data
11	D	Depth data (LSD)
12	CR	Carriage return

Example: <sp>ETOL<sp>DDDDD<CR>
 = <sp>ETOL<sp>54321<CR>
 = Low freq. error, 54321dft

Using dual frequencies

Table 17: Echotrac DBT with Both Frequencies Active (high and low)

Character #	Character	Description
1	<sp>	Always a space
2-3	et, ET	Unit indicator: "et" = centimeters, "ET" = tenths of feet
4	<sp>, E, O, D	Normally a space, "E" = high frequency error, "O" = low frequency error (missed return), "D" = high and low error (missed returns)
5	B	Frequency indicator: Both high and low
6	<sp>	Always a space
7	D	High frequency depth data (MSD)
8	D	High frequency depth data

Character #	Character	Description
9	D	High frequency depth data
10	D	High frequency depth data
11	D	High frequency depth data (LSD)
12	<sp>	Always a space
13	D	Low frequency depth data (MSD)
14	D	Low frequency depth data
15	D	Low frequency depth data
16	D	Low frequency depth data
17	D	Low frequency depth data (LSD)
18	CR	Carriage return

Example: <sp>etDB<sp>DDDDDD<sp>DDDDDD<CR>
 = <sp>etDB<sp>54321<sp>56789<CR>
 = High and low error, dual freq., 54321cm high-freq. depth, 56789cm low-freq. depth

C.4 DESO25 (for depth)

Table 18: DESO25 with One Frequency Active (high or low)

Character #	Character	Description
1	D	Always D
2	A, B	Frequency indicator: "A" = high, "B" = low
3-10	DDDDDDDD	Depth data
11	<sp>, f	Space, "f" = feet
12	m, t	Unit indicator: "m" = meters, "t" = feet
13	CR	Carriage return
14	LF	Line feed

Example: DBDDDDDDDD<sp>m<CR><LF>
 = DB20.00665<sp>m<CR><LF> or DB684.9470ft<CR><LF>
 = Low freq., 20.00665 meters or DB684.9470 feet

C.5 NMEA 0183 DBS, Depth Below Surface

Table 19: NMEA 0183 DBS with One Frequency Active (high or low)

Character #	Description
1-7	\$SDDBS,
	Depth in feet. Single decimal floating point number.
	,f,
	Depth in meters. Single decimal floating point number.
	,M,
	Depth in fathoms. Single decimal floating point number.
	,F*
	8 bit hexadecimal value checksum calculated over the entire string excluding the leading '\$'
	Carriage return
	Line feed

Example: \$SDDBS,dd.d,f,d.d,M,d.d,F*36<CR><LF>
 = \$SDDBS,67.915,f,20.701,M,11.319,F*32<CR><LF>
 = 67.915 feet, 20.701 meters, 11.319 fathoms

C.6 DESO DDV (for heave, draft, and sound velocity)

Table 20, Table 21, Table 22 apply to the selection of DESO DDV with one frequency (high or low) active. With every ping, the following three strings will be generated immediately after the DESO25 output string.

This feature is only available upon request for Deso echosounders.

Table 20: DESO DDV Heave

Character #	Character	Description
1	D	Always D
2	H	Always H
3-4	DD	Heave data
5	.	Period
6-7	DD	Heave data decimal
8	<sp>	Space
9	m	meters
10	CR	Carriage return
11	LF	Line feed

Example: DHDD.DD<sp>m<CR><LF>
 = DH-2.00<sp>m<CR><LF>
 = Heave, -2.00 meters

Table 21: DESO DDV Draft

Character #	Character	Description
1	D	Always D
2	G	Always G
3-4	DD	Draft data
5	.	Period
6-7	DD	Draft data decimal
8	<sp>	Space
9	m	meters
10	<sp>	Space
11	CR	Carriage return
12	LF	Line feed

Example: DG<sp>DD.DD<sp>m<sp><CR><LF>
 = DG<sp>00.00<sp>m<sp><CR><LF>
 = Draft 0.00 meters

Table 22: DESO DDV Sound Velocity

Character #	Character	Description
1	C	Always C
2	S	Always S
3-6	DDDD	Sound velocity data
9	<sp>	Space
10-12	m/s	meters per second
13	CR	Carriage return
14	LF	Line feed

Example: CSDDDD<sp>m/s<CR><LF>
 = CS1500<sp>m/s<CR><LF>
 = Sound velocity 1500 meters per second

APPENDIX D – STANDARD WARRANTY INFORMATION⁸

D.1 Limited Warranty

Teledyne RESON warrants that our SeaBat™ T-Series systems shall be free from defects in materials and workmanship for a period of thirty-six (36) months from the date of Teledyne RESON's original shipment, and that all our other systems and/or auxiliary items shall be free from defects in materials and workmanship for a period of twelve (12) months from the date of Teledyne RESON's original shipment. These warranty periods apply, unless Teledyne RESON has specified a longer standard warranty period for a particular product and/or offered an extended warranty.

During the warranty period, Teledyne RESON will, at its sole option, either repair, replace, or issue a credit for the original price of the defective system. Such repair, replacement, or credit shall be the sole remedy for a defective system. For full information about the warranty provisions, please refer to the section "Limited Warranty" in our General Terms and Conditions of Sale.

Teledyne RESON systems must be serviced by Teledyne RESON or one of Teledyne RESON's authorized service providers. Any return of nonconforming or defective systems is subject to Teledyne RESON's current return authorization process and procedures (see *appendix E.2 Returning Goods for Service*).

D.2 Warranty Exclusions

The warranty on Teledyne RESON systems does not apply to defects arising from:

- Improper installation, operation, or maintenance.
- Improper handling, storage, or transportation.
- Unauthorized modifications, alterations, or repairs.
- Failure to comply with Teledyne RESON's safety precautions.
- Accidental damage.
- Normal wear and tear.

D.3 Warranty Limitations

No warranties of merchantability or fitness for a particular purpose is intended or given.

D.4 Servicing During Warranty Period

If your system should encounter technical issues during the warranty period, please contact the customer support hotline (see *Appendix E – Support and Service*) to protect your warranty rights.

⁸ Please refer to Teledyne RESON's General Terms and Conditions of Sale, available at <http://www.teledynemarine.com/reson/> > Terms and Conditions.

APPENDIX E – SUPPORT AND SERVICE

E.1 Support

If you experience difficulties with your Teledyne RESON system, please contact Teledyne RESON Support for further instructions:

EUROPE

Tel: +45 20 999 088

e-mail: Marine-supportDK@Teledyne.com (Denmark)
Marine-supportGE@Teledyne.com (Germany)
Marine-supportNL@Teledyne.com (The Netherlands)
Marine-supportUK@Teledyne.com (United Kingdom)

UNITED STATES

Tel: +1 805 233 3900

e-mail: Marine-supportUS@Teledyne.com

E.2 Returning Goods for Service

NOTE

No goods may be returned without prior authorization, as evidenced by a Return Authorization (RMA) Number.

Before returning any equipment for service, you must follow the Teledyne RESON equipment return procedure stated below:

- (a) Contact a Teledyne RESON office to obtain an approved Return Material Authorization (RMA) number.
- (b) Follow the instructions in the supplied document and pack the equipment in the original shipping containers.
- (c) Ship the equipment, transportation and insurance prepaid, according to the instructions issued by Teledyne RESON.
- (d) Ensure that the RMA number is included on all shipping documents and, most importantly, marked on the shipping container's address label.
- (e) Include a note which identifies the model or part number, and serial number (if applicable) along with a brief, but thorough, description of the problem.



TELEDYNE RESON
Everywhereyoulook™

DESO 5DS Operator's Manual

Produced by

Teledyne RESON A/S
Fabriksvangen 13
3550 Slangerup
Denmark

Tel: +45 47 38 00 22
Fax: +45 47 38 00 66

Document Number: OM21910-6
Part Number: 1015871-DK